


## TRANSAXLE OIL INSPECTION [G35M-R]

B3E051527001W03

1. Park the vehicle on level ground.
2. Remove the oil level plug and washer.
3. Verify that the oil is near the brim of the plug port.

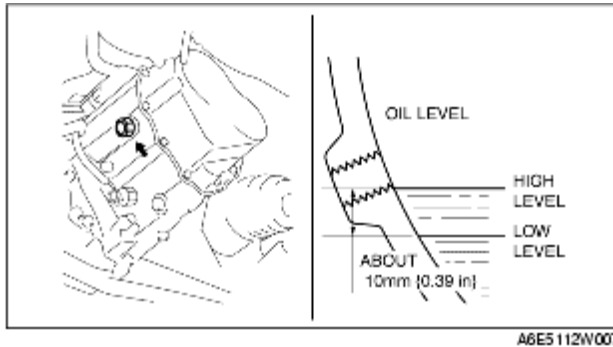

- If the oil level is lower than the low level, add the specified amount and type of oil through the oil level plug hole.

**Specified oil grade****API Service GL-4 or GL-5****Specified oil viscosity****All-season: SAE 75W-90****Above 10 °C {50 °F}: SAE 80W-90**

4. Install a new washer and the oil level plug.

**Tightening torque****40-58 N·m {4.0-6.0 kgf·m, 29-43 ft·lbf}**