

# AUTOMATIC TRANSAXLE OUTLINE

---

B3E051701030T01

- A manual mode shift control has been adopted.
  - The manual mode shift control is activated by moving the selector lever from the D to M range position.
  - The automatic shift system automatically shifts between 1GR and 4GR. The manual shift system allows for free gear position selection by manually operating the selector lever forward and back.