

TRANSAXLE RANGE (TR) SWITCH FUNCTION

B3E051719010T01

- The transaxle range switch detects the selector lever position and sends a signal to the PCM and the instrument cluster.