

VEHICLE SPEED SENSOR (VSS) FUNCTION

B3E051719010T03

- The VSS is located in the converter housing with clearance between it and the sensor rotor in the differential case, and detects the differential rotating speed.