

INPUT/TURBINE SPEED SENSOR FUNCTION

B3E051719010T05

- The input/turbine speed sensor is located in the transaxle case with clearance between it and the forward clutch drum, and detects the rotating speed of the forward clutch drum (turbine).