

## AT WARNING LIGHT FUNCTION

---

B3E051719010T09

- The AT warning light illuminates to alert the driver of a malfunction in the automatic transaxle.