


AT WARNING LIGHT CONSTRUCTION/OPERATION

B3E051719010T10

- The AT warning light is built into the instrument cluster.
- The AT warning light illuminates when the instrument cluster receives a warning signal from the PCM via CAN communication.
- The PCM sends a warning signal to the instrument cluster via CAN communication when it detects a malfunction.

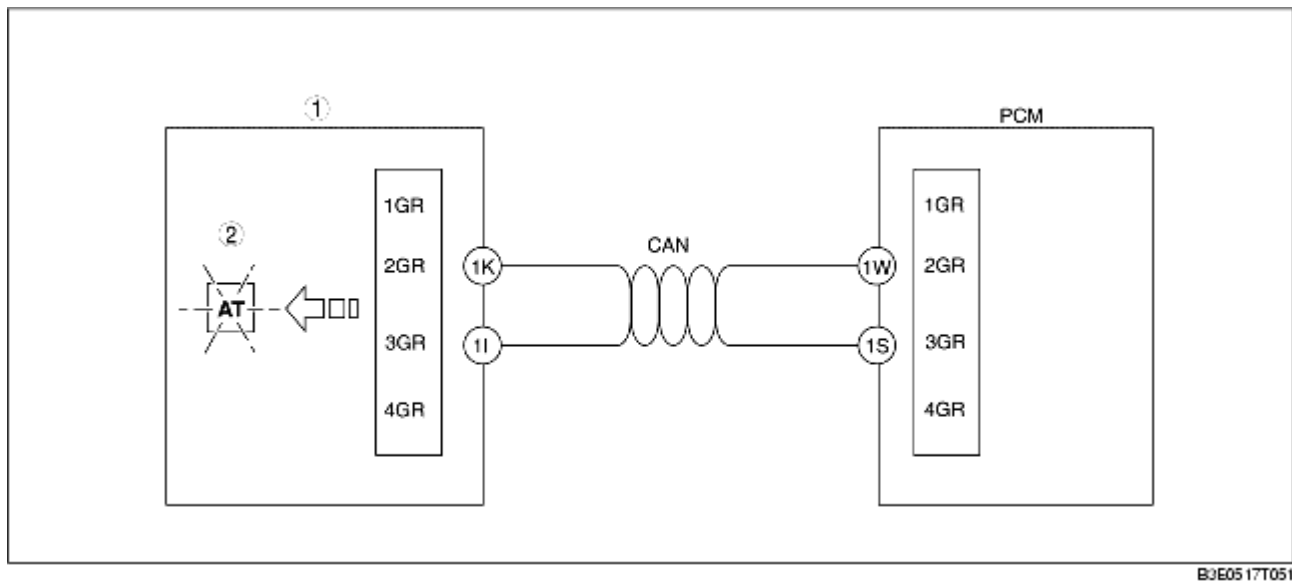

1	Instrument cluster
2	AT warning light