

# TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/INSTALLATION


---

B3E051719010W02

## Warning

- A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool before replacing the ATF.

1. Remove the oil pan. (See [CONTROL VALVE BODY REMOVAL.](#))
2. Remove the control valve body. (See [CONTROL VALVE BODY REMOVAL.](#))
3. Remove the coupler component.

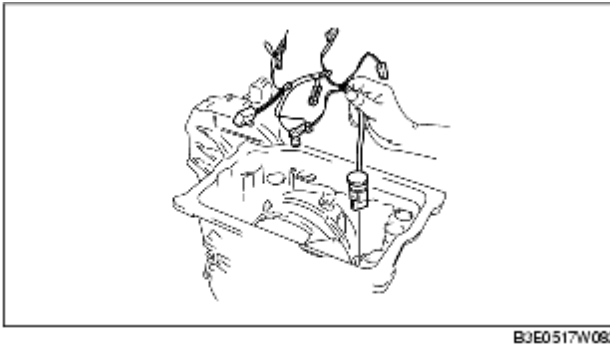

4. Install a coupler component.
5. Install the control valve body. (See [On-Vehicle Installation.](#))
6. Install the oil pan. (See [CONTROL VALVE BODY INSTALLATION.](#))
7. Perform the mechanical system test. (See [MECHANICAL SYSTEM TEST.](#))