


# INPUT/TURBINE SPEED SENSOR REMOVAL/INSTALLATION

---

B3E051719010W04

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).) (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
2. Disconnect the negative battery cable.
3. Remove the battery, battery box and battery tray. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).) (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
4. Disconnect the input/turbine speed sensor connector.

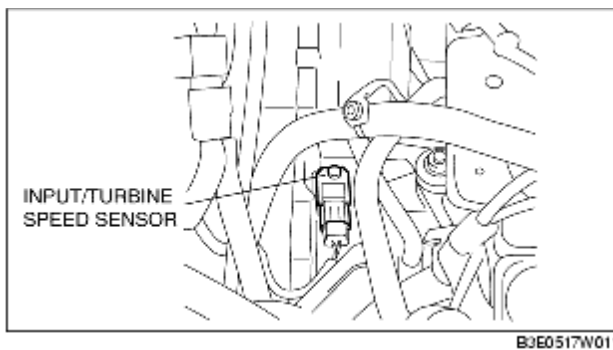

5. Remove the input/turbine speed sensor.
6. Apply ATF to a new O-ring and install it on an input/turbine speed sensor.
7. Install the input/turbine speed sensor.

**Tightening torque****8-11 N·m {82-112 kgf·cm, 71-97 in·lbf}**

8. Connect the input/turbine speed sensor connector.
9. Install the battery, battery box and battery tray. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).) (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
10. Connect the negative battery cable.
11. Install the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).) (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)