


OIL PUMP STRUCTURE

B3E051719220T02

- The outer rotor and the inner rotor are installed in the oil pump housing.
- The inner rotor in the oil pump housing is driven by the torque converter.

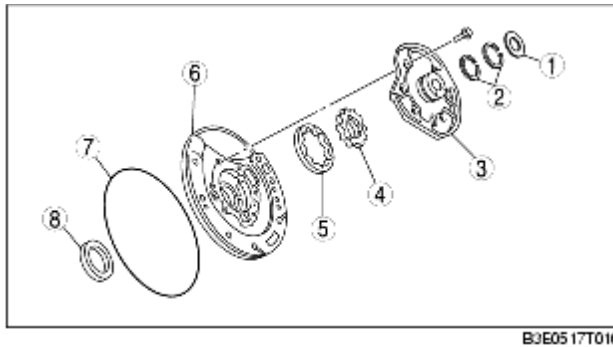

B3E05 17T016

| | |
|---|------------------|
| 1 | Thrust washer |
| 2 | Seal ring |
| 3 | Oil pump cover |
| 4 | Inner rotor |
| 5 | Outer rotor |
| 6 | Oil pump housing |
| 7 | O-ring |
| 8 | Oil seal |