



# PRESSURE CONTROL SOLENOID (LINEAR TYPE) OPERATION

B3E051721280T02

- By changing the electrical current value (0 A-1 A) inside the solenoid, the pressure control solenoid adjusts the hold power of the hold pressure valve, controlling the pressure control solenoid pressure to the prescribed hydraulic pressure.

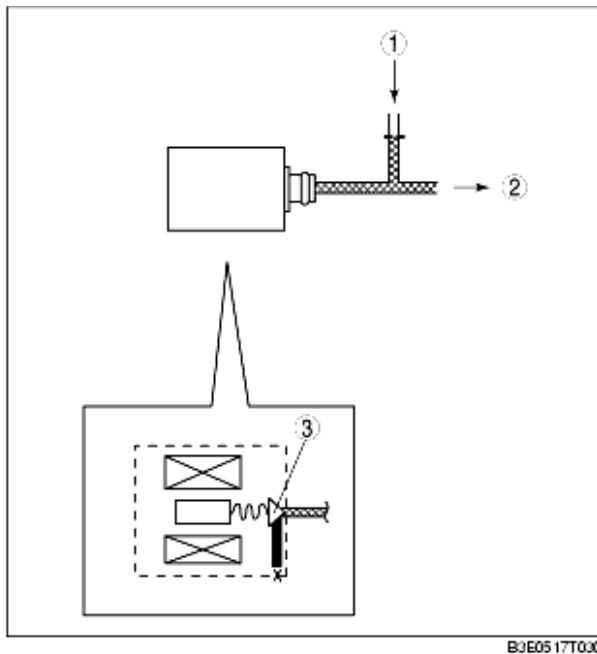

1	Solenoid reducing pressure
2	To pressure regulator valve
3	Hold pressure valve

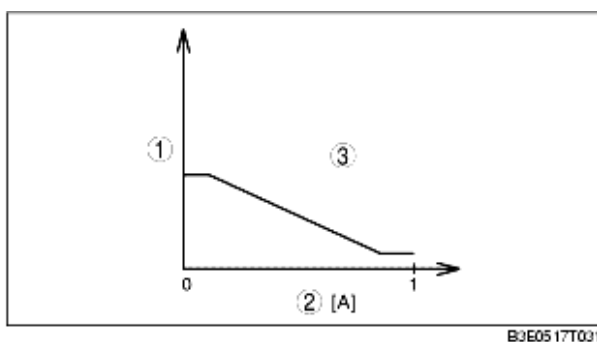

1	Hydraulic pressure
2	Electrical current value
3	Pressure control solenoid pressure