



SELECTOR LEVER INSPECTION

B3E051846102W01

1. Turn the ignition switch to the ON position (engine off).
2. With the brake pedal depressed, verify that there is a "click" at each range when shifted.

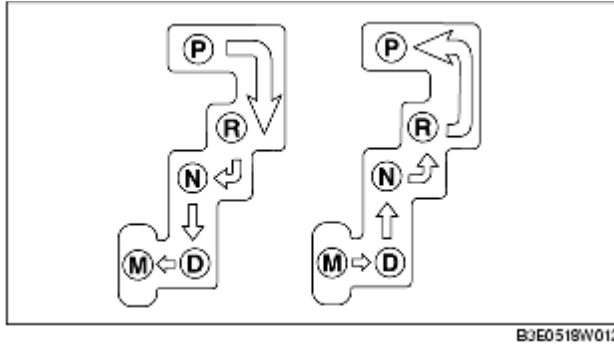

3. Verify that the selector lever can be shifted.
4. Verify that there is a "click" at each position when shifted from P position to M range.
5. Verify that the positions of the selector lever and the indicator are aligned.

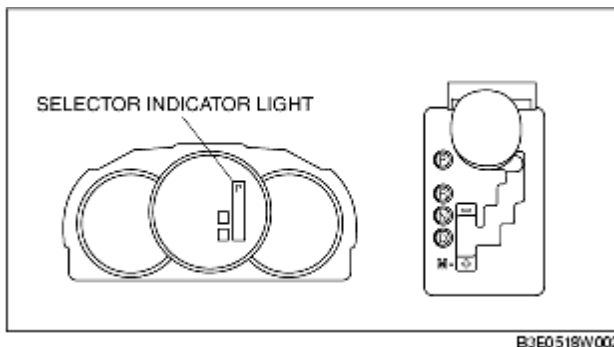

- If there is any malfunction, adjust the TR switch. (See [TRANSAXLE RANGE \(TR\) SWITCH ADJUSTMENT.](#))

6. Verify that the vehicle operates in each selected range.