


SELECTOR LEVER COMPONENT INSPECTION

B3E051846102W02

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).) (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
2. Disconnect the negative battery cable.
3. Remove the console. (See [CONSOLE REMOVAL/INSTALLATION](#).)
4. Disconnect the selector lever component connector.
5. Verify that the continuity is as indicated in the table.

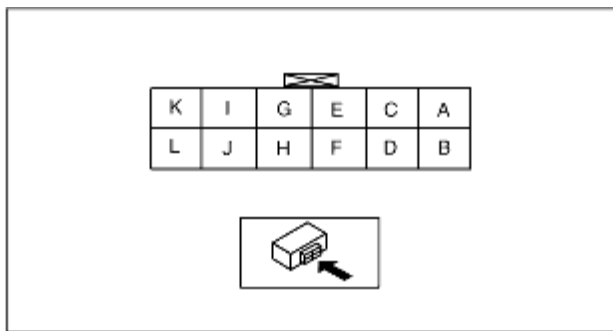

- If there is any malfunction, adjust the selector cable. (See [SELECTOR CABLE ADJUSTMENT](#).)

Selector lever position/range		Connector terminal											
		A	B	C	D	E	F	G	H	I	J	K	L
M range	- M			○								○	
	center M	○										○	
	+ M		○									○	
Other													

○—○: Continuity

B3E0518W004