

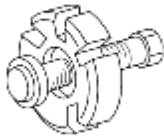
TRANSMISSION/TRANSAXLE SST

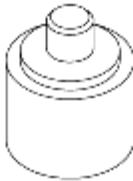

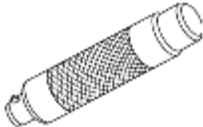
 
 
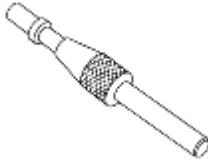


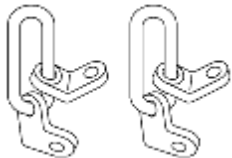
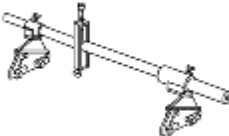

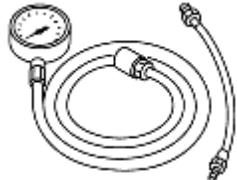
B3E056001024W01

1: Mazda SST number

2: Global SST number

Example

1:49 UN30 3009 2:303-009 Crankshaft damper remover	
--	---

1:49 UN30 8157 2:308-157 Pilot bearing installer		1:49 F028 202 2: - Bush installer		49 B001 797 2: - Handle	
1:49 UN20 5153 2:205-153 Handle		1:49 E011 1A0 2: - Ring gear brake set		1:49 SE01 310A 2: - Clutch disc centering tool	
1:49 1285 071 2: - Bearing puller		1:49 G030 795 2: - Oil seal installer		1:49 UN30 3050 2: 303-050 Engine lifting bracket	
1:49 E017 5A0 2: - Engine support set		1:49 B019 901B 2: - Oil pressure gauge		1:49 0378 400C 2: - Oil pressure gauge set	
1: - 2: - WDS	