

# ON-BOARD DIAGNOSTIC SYSTEM PID/DATA MONITOR FUNCTION (ELECTRO HYDRAULIC POWER ASSIST STEERING)

B3E060201038T03

- The PID/data monitor function is used for optionally selecting input/output signal monitor items preset in the EHPAS control module and reading them out in real-time.

Command name (WDS or equivalent display)	Input/output part	Unit/operation (WDS or equivalent display)
CCNT	DTC (Number of continuous DTCs)	-
MTR_AMP	Motor operating current signal	Ampere
ENGRPM	Engine speed signal	RPM
RPM_ACT	Actual motor speed signal	RPM
RPM_TGT	Target motor speed signal	RPM
STEER_RATE	P/S angle sensor	degree/sec
TEMP_BOARD	Circuit temperature	Celcius/Fahrenheit
VPWR	EHPAS control module supply voltage	Volt
VSS	Vehicle speed signal	KPH/MPH