

NO.1 POOR POWER STEERING ASSIST

B3E060301038W05

1	POOR POWER STEERING ASSIST
TROUBLESHOOTING HINTS	
<ul style="list-style-type: none"> • Power steering fluid leakage from EHPAS fluid line • Steering gear and linkage malfunction • EHPAS control module malfunction 	

Diagnostic procedure

STEP	INSPECTION		ACTION
1	RETRIEVE DTC FROM EHPAS CONTROL MODULE <ul style="list-style-type: none"> • Are any DTCs present? 	Yes	Record all DTC and go to the applicable DTC inspection.
		No	Go to the next step.
2	INSPECT STEERING WHEEL ASSIST FUNCTION <ul style="list-style-type: none"> • Disconnect the EHPAS control module connector (2-pin). • Is the power steering assist function changed? 	Yes	Go to the next step.
		No	Visually inspect the steering gear and linkage. Replace it if the malfunction is found.
3	INSPECT IF THERE IS ANY FLUID LEAK FROM THE EHPAS FLUID LINE <ul style="list-style-type: none"> • Is there fluid leakage? 	Yes	Replace it if necessary.
		No	Replace the EHPAS control module. (See ELECTRIC POWER STEERING OIL PUMP (LF) REMOVAL/INSTALLATION.)