


STEERING SHAFT INSPECTION

B3E061432100W01


1. Inspect the column bearing for excessive play and damage.
2. Verify that the measurement of the steering shaft indicated in the figure is as specified.

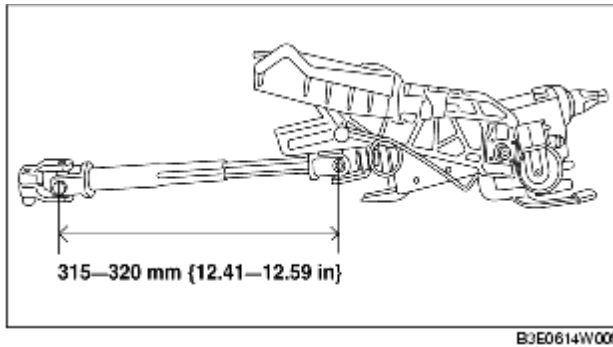

- If not within the specification replace the steering shaft component.

Standard**315-320 mm {12.41-12.59 in}**

3. Inspect the tilt/telescope mechanism operation for the following.

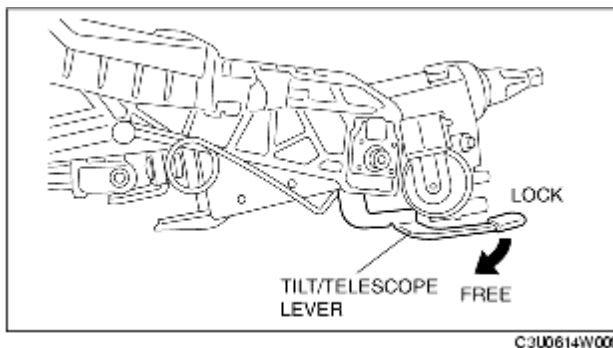

- (1) Tilt/telescope lever moves smoothly from the lock to the unlock position.
- (2) Steering shaft is fixed firmly when the tilt/telescope lever is locked.
 - If there is any malfunction, replace the steering shaft.