


AIR FILTER REMOVAL/INSTALLATION


B3E071113988W01

1. Disconnect the negative battery cable.
2. Remove the PJB and PJB bracket. (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#))
3. Remove the side wall.
4. Disconnect the evaporator temperature sensor connector (L.H.D.).
5. Disconnect the power MOS FET connector. (L.H.D. Full-auto air conditioner)
6. Remove in the order indicated in the table.

L.H.D.

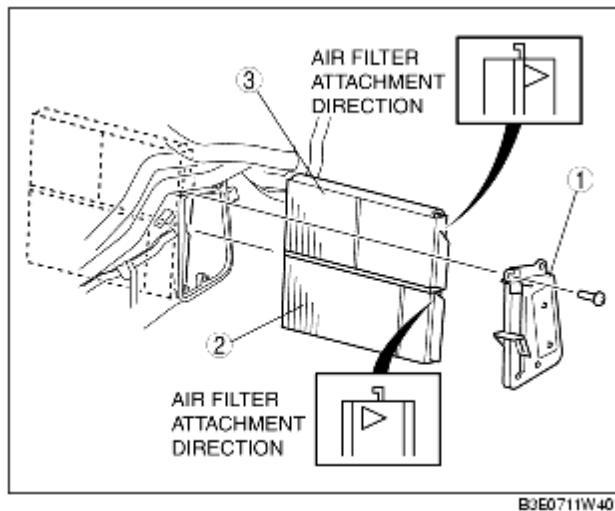

R.H.D.

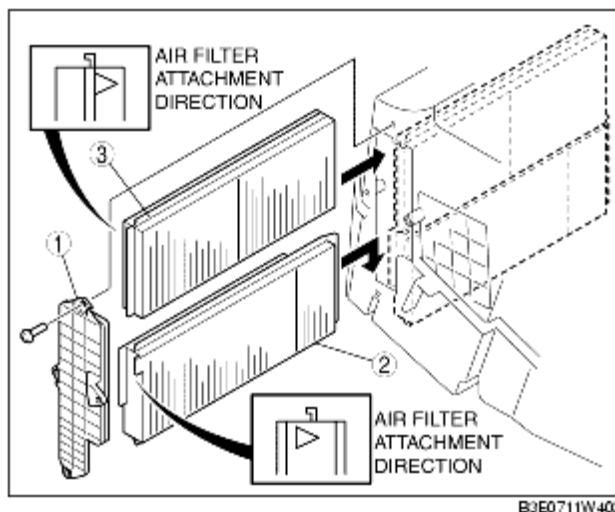

1	Air filter cover
2	Air filter (1)
3	Air filter (2)

7. Install in the reverse order of removal.