

## AIR FILTER INSPECTION

---

B3E071113988W02

1. Verify that there is no damage, excessive dirt, or abnormal odor on the air filter.

- If there is any malfunction, replace the air filter.

### Note

- The air filter is replaced **once two years** or every **40,000 km {25,000 miles}**.
- The air filter cannot be reused by cleaning it with water or compressed air.