

RECEIVER/DRIER REMOVAL/INSTALLATION


B3E071161070W01

1. Disconnect the negative battery cable.
2. Discharge the refrigerant from the system. (See [REFRIGERANT RECOVERY.](#)) (See [REFRIGERANT CHARGING.](#))
3. Remove the under cover.

Caution

- If moisture or foreign material enters the refrigeration cycle, cooling ability will be lowered and abnormal noise will occur. Always immediately plug all open fittings after removing any refrigeration cycle parts to keep moisture or foreign material out of the cycle.

4. Remove the receiver/drier. Do not allow compressor oil to spill.

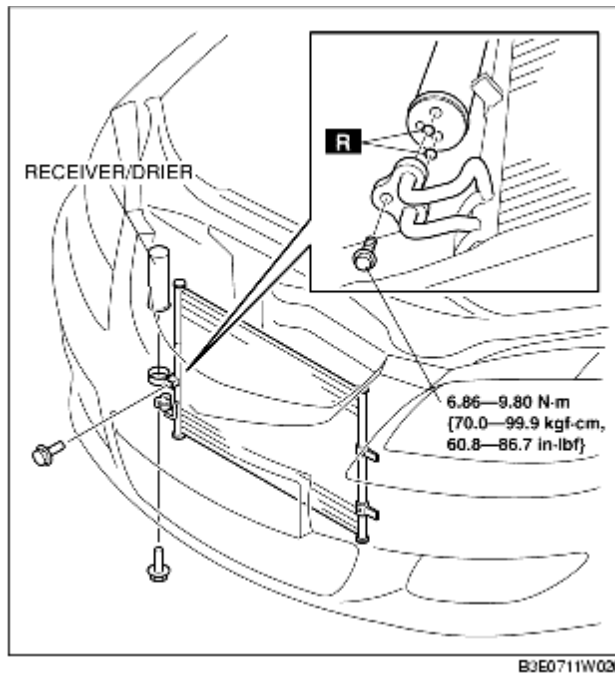

5. Install in the reverse order of removal.
6. Perform the refrigerant system performance test. (See [REFRIGERANT SYSTEM PERFORMANCE TEST.](#))