


AIRFLOW MODE MAIN LINK REMOVAL/INSTALLATION

B3E071161130W05

L.H.D.

1. Disconnect the negative battery cable.
2. Detach the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#).)
3. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
4. Remove the front side trim. (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
5. Remove the lower panel. (See [LOWER PANEL REMOVAL/INSTALLATION](#).)
6. Remove the shower duct (LH).
7. Remove the airflow mode actuator. (full-auto air conditioner) (See [AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION](#).)
8. Disconnect the airflow mode wire. (See [CLIMATE CONTROL UNIT REMOVAL \[MANUAL AIR CONDITIONER\]](#).)
9. Remove the airflow mode rod (1).
10. Remove the airflow mode main link.

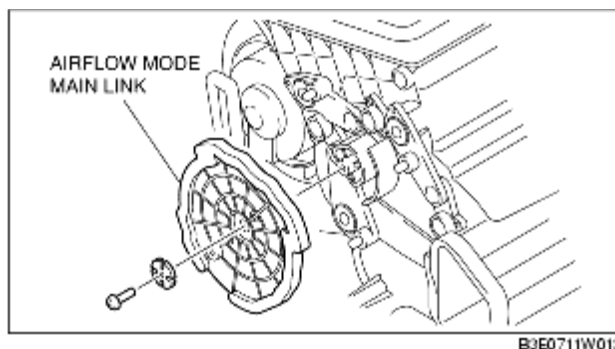

11. Install in the reverse order of removal.
12. Adjust the airflow mode wire. (See [CLIMATE CONTROL UNIT WIRE ADJUSTMENT](#).)


R.H.D.

1. Disconnect the negative battery cable.
2. Removal the following parts.
 - (1) Front door (See [FRONT DOOR REMOVAL/INSTALLATION](#).)
 - (2) Ashtray panel (See [CONSOLE REMOVAL/INSTALLATION](#).)
 - (3) Console (See [CONSOLE REMOVAL/INSTALLATION](#).)
 - (4) Shift lever component (MTX) (See [SHIFT MECHANISM REMOVAL/INSTALLATION](#).)

- (5) Selector lever component (ATX) (See [SELECTOR LEVER COMPONENT REMOVAL/INSTALLATION.](#))
- (6) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
- (7) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (8) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
- (9) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION.](#))
- (10) Shower ducts (LH, RH)
- (11) PJB (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#))
- (12) Car-navigation unit (See [CAR-NAVIGATION UNIT REMOVAL/INSTALLATION.](#))
- (13) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
- (14) Column cover (See [COLUMN COVER REMOVAL/INSTALLATION.](#))
- (15) Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.](#))
- (16) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (17) Center panel (See [CENTER PANEL MODULE REMOVAL/INSTALLATION.](#))
- (18) Windshield wiper arm and blade (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.](#))
- (19) Cowl grille (See [COWL GRILLE REMOVAL/INSTALLATION.](#))
- (20) Cowl panel (See [COWL PANEL REMOVAL/INSTALLATION.](#))
- (21) Windshield wiper motor (See [WINDSHIELD WIPER MOTOR REMOVAL/INSTALLATION.](#))
- (22) IDashboard (See [DASHBOARD REMOVAL/INSTALLATION.](#))

3. Remove the airflow mode rot (1).

4. Remove the airflow mode main link.

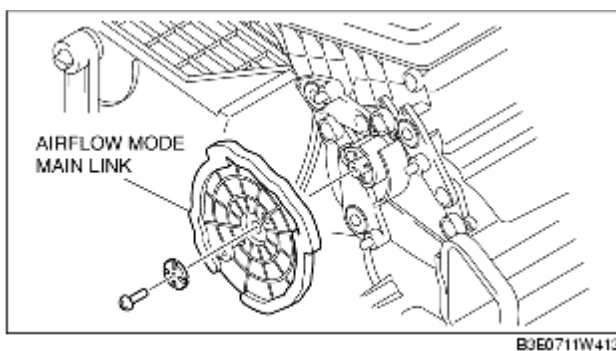

5. Install in the reverse order of removal.


6. Adjust the airflow mode wire. (See [CLIMATE CONTROL UNIT WIRE ADJUSTMENT.](#))

Airflow Mode Main Link Installation Note

Caution

- Apply only the specified grease to links. Otherwise abnormal noise or improper operation may result.

1. Push and hold each airflow mode sub link in the direction of the arrow.

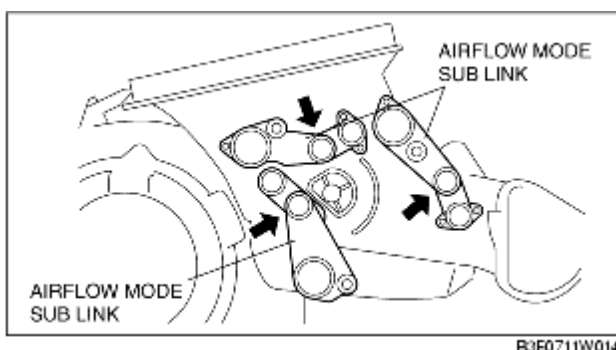

2. Set the airflow mode main link to the A/C unit as shown in the figure.
3. Press the airflow mode main link lightly to the A/C unit in the direction shown by the arrow, then set the projections of each airflow mode sub link into the grooves of the airflow mode main link.
4. Rotate airflow mode main link and verify that each mode is accessed properly.

