

CONDENSER INSPECTION

B3E071161480W02

1. Inspect the condenser for cracks, damage, and oil leakage.
 - If there is any malfunction, replace the condenser.
2. Visually inspect the fins for clogging of foreign material.
 - If any fins are clogged, remove the foreign material.
3. Visually inspect the fins for bending.
 - If there is any bending, use the end of a flathead screwdriver to straighten fins.