

EVAPORATOR INSPECTION

B3E071161810W01

1. Inspect the evaporator for damage, cracks, and oil leakage.

- If there is any malfunction, replace the evaporator.

2. Visually inspect the fins for bending.

- If there is any bending, use the end of a flathead screwdriver to straighten the fins.