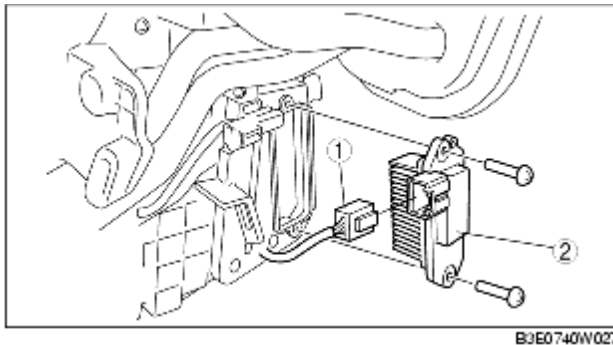
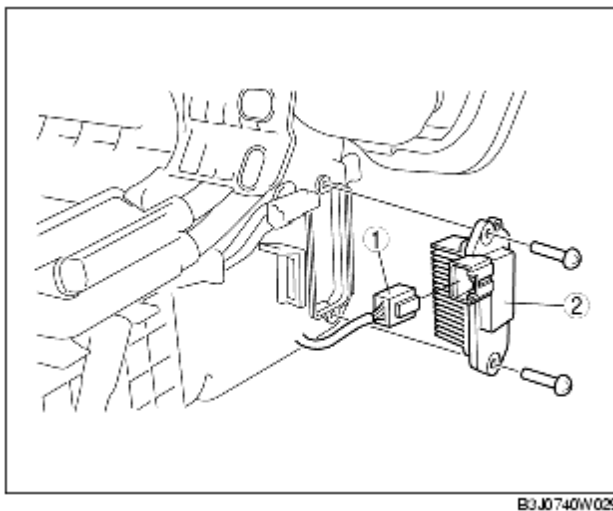


POWER MOS FET REMOVAL/INSTALLATION

B3E074000116W01

1. Disconnect the negative battery cable.
2. Remove the PJB and PJB bracket. (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#)) (L.H.D.)
3. Remove in the order indicated in the table.

L.H.D.**R.H.D.**

| | |
|---|-------------------------|
| 1 | Power MOS FET connector |
| 2 | Power MOS FET |

4. Install in the reverse order of removal.