

RESISTOR INSPECTION

B3E074061015W02

1. Verify that the resistance between the resistor terminals is as shown in the table.

- If there is any malfunction, replace the resistor.

Terminal	Resistance (ohm)
A-D	0.27-0.30
A-B	0.77-0.87
A-C	3.05-3.49

