


## BLOWER MOTOR REMOVAL

B3E074061020W01


### Note

- The blower motor is located on the A/C unit as shown in the figure.


### L.H.D.

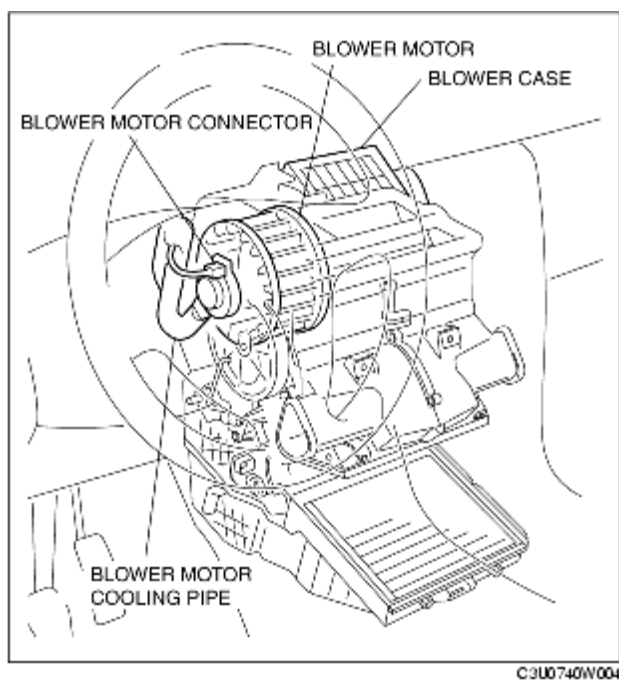


### R.H.D.

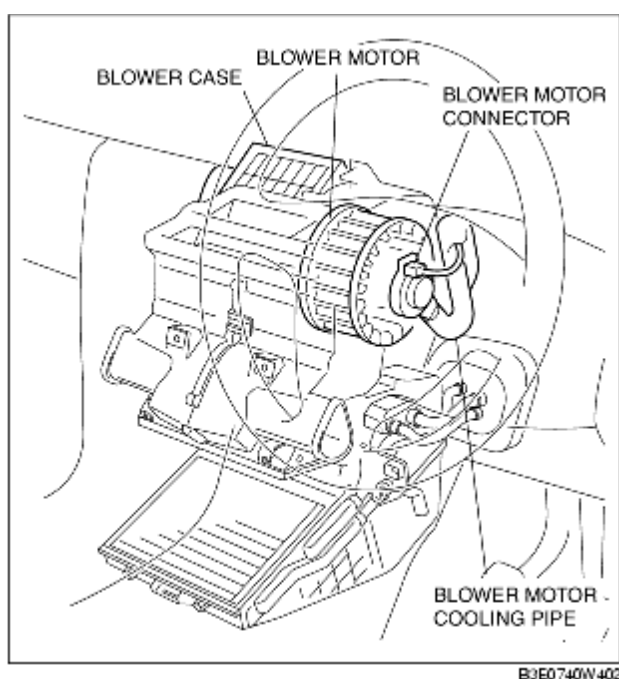

- Perform the work from the front passenger's side in the posture shown in the figure.


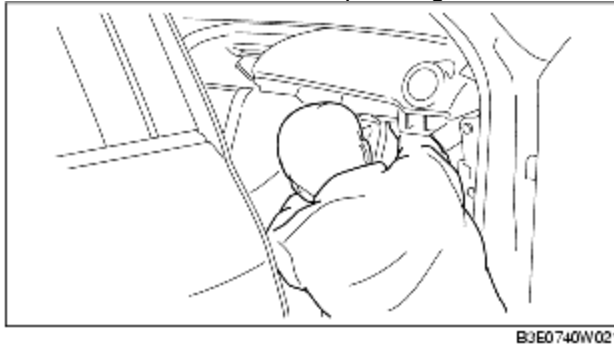


1. Set the air intake mode to FRESH.
2. Disconnect the negative battery cable.
3. Remove the following parts:
  - (1) Front side trim (RH) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
  - (2) Front scuff plate (RH) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
  - (3) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
  - (4) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION.](#))
  - (5) PJB and PJB bracket (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#))
  - (6) Car-navigation unit (See [CAR-NAVIGATION UNIT REMOVAL/INSTALLATION.](#))
  - (7) Auto leveling control module (See [AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.](#)) (L.H.D.)
4. Cut off the temporary steering stay on the passenger's side.

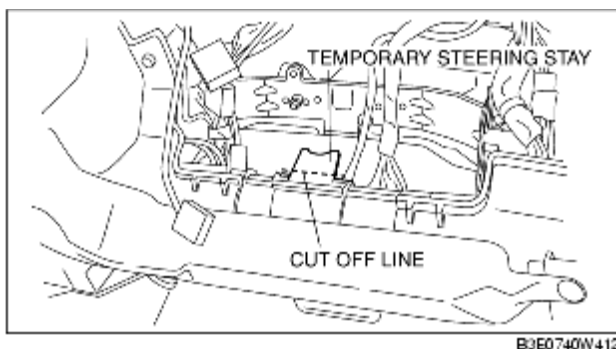


5. Remove the PJB wiring harness grommets. (R.H.D.)
6. Detach the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#).) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
7. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
8. Remove the front side trim. (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
9. Remove the lower panel. (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
10. Disconnect the two fluid pipes for the clutch pedal and remove the four clutch pedal bracket installation nuts. (See [CLUTCH PEDAL REMOVAL/INSTALLATION.](#)) (R.H.D.)
11. Remove the screws shown in the figure and slide the blower case.


**L.H.D.**

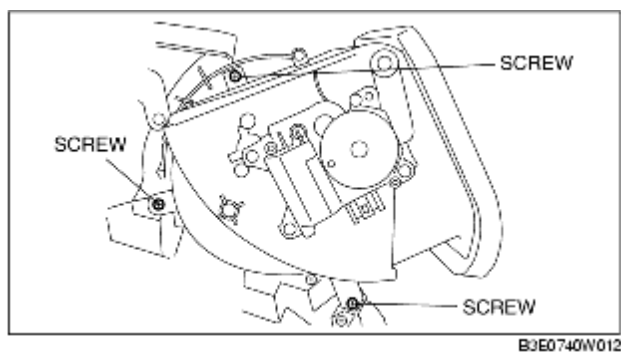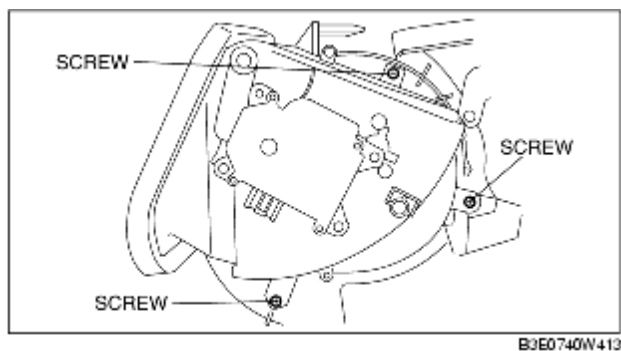**R.H.D.**

12. Disconnect the air intake actuator connector.


13. Remove the blower case shown in the figure.

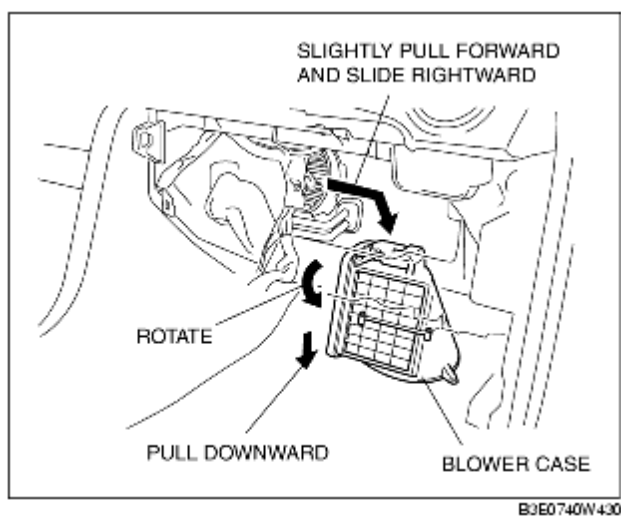**L.H.D.****R.H.D.**

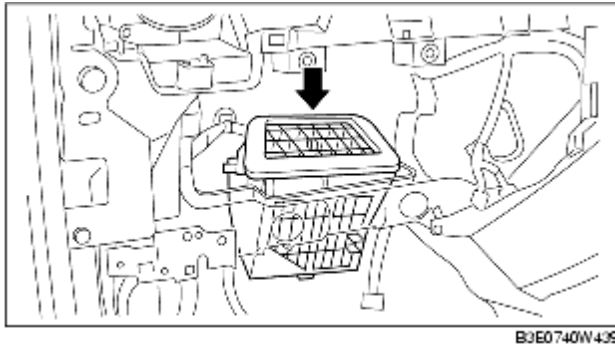


14. Remove the air guide.

**L.H.D.**

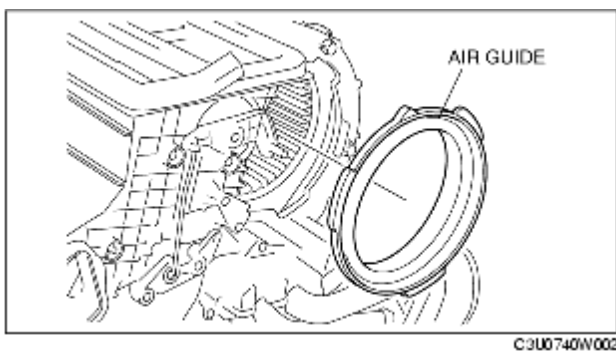

**R.H.D.**

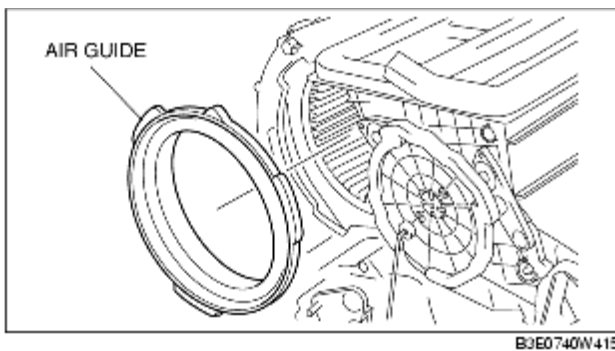


15. Install the **SST (49 B061 015)** to the blower motor. (See [SST Installation Note.](#))

16. Disconnect the resistor connector. (Manual air conditioner)



17. Disconnect the blower motor cooling pipe connected to the blower motor.

**L.H.D.**

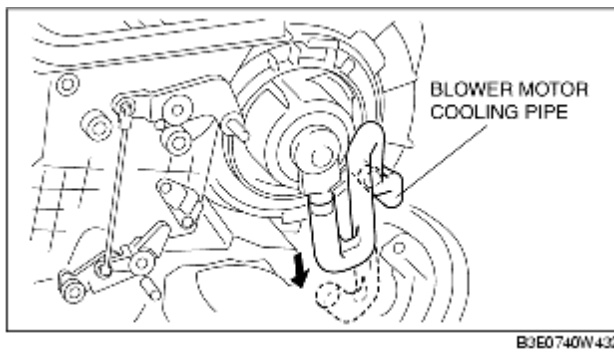**R.H.D.**

18. Remove the airflow mode actuator. (See [AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION](#).)

19. Disconnect the blower motor connector as shown in the figure.

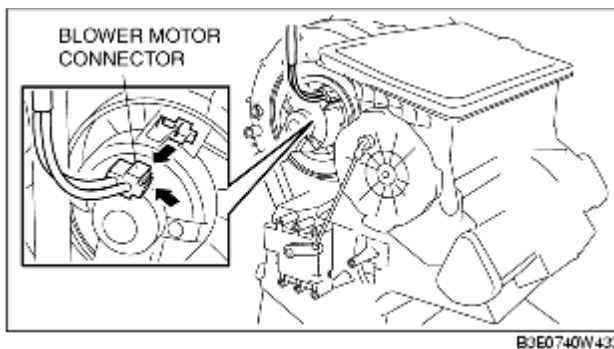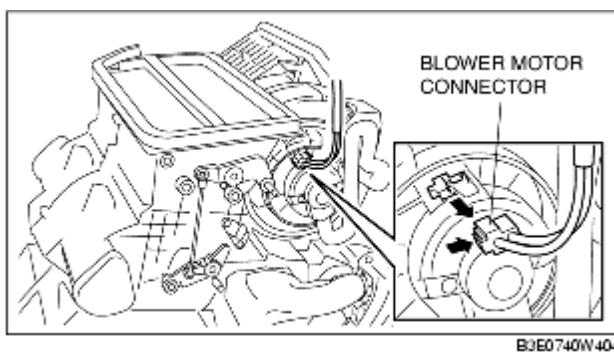**L.H.D.****R.H.D.**

20. Remove the blower motor cover. (See [Blower Motor Cover Removal Note](#).)

**Caution**


- When the blower motor cover is removed, the blower motor could fall in the A/C unit case causing the sirocco fan to be damaged. Therefore another person must hold the blower motor at the installation position.

21. Remove the blower motor by pulling it out. (See [Blower Motor Removal Note](#).)



## SST Installation Note

1. Align the **SST** guide with the sirocco fan clip position and press the **SST** tabs (3) into the three set holes on the blower motor until they are inserted.

**L.H.D.**

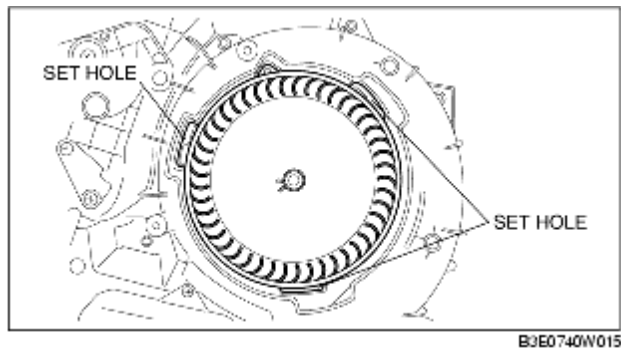

**R.H.D.**

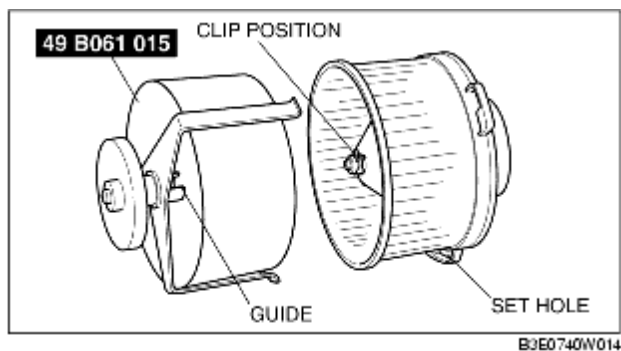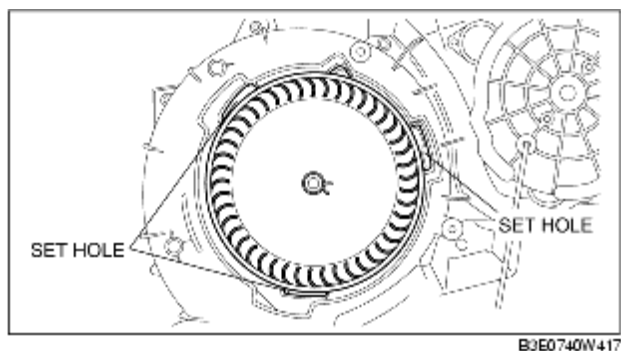


2. Rotate the **SST** (49 B061 015) clockwise to lock the **SST** and blower motor.


## Blower Motor Cover Removal Note

1. Pull the lock on the top of the blower motor cover and rotate the blower motor cover .

### L.H.D.

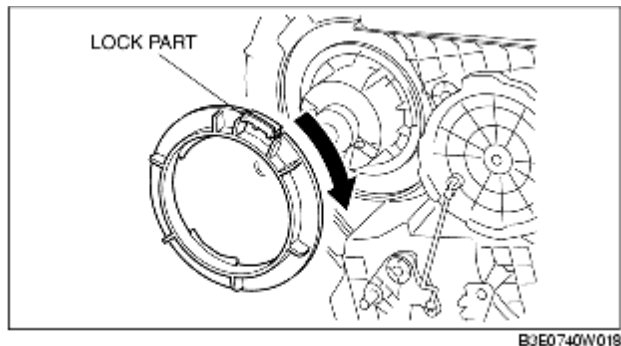

### R.H.D.

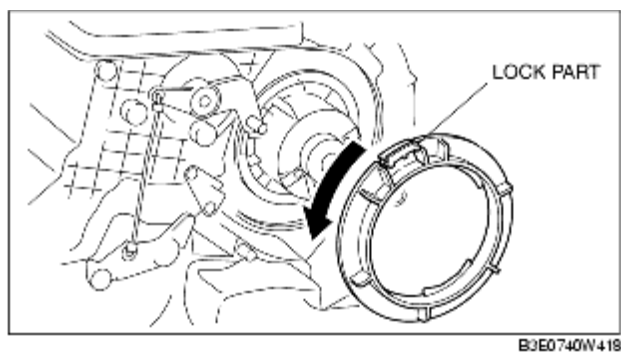


## Blower Motor Removal Note

### Caution

- To prevent damage to the sirocco fan, pull the blower motor out being careful that the blower motor does not interfere with the A/C unit.

### L.H.D.

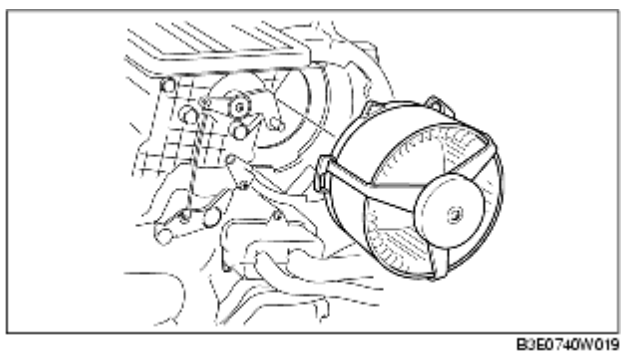

### R.H.D.

