


BLOWER MOTOR INSTALLATION


B3E074061020W02

1. Install the **SST** to the blower motor. (See [SST Installation Note](#).)
2. Install the blower motor with the **SST (49 B061 015)** installed, to the A/C unit. (See [Blower Motor Installation Note](#).)
3. Install the blower motor cover from the driver's side. (See [Blower Motor Cover Installation Note](#).)
4. Connect the blower motor connector as shown in the figure.

L.H.D.

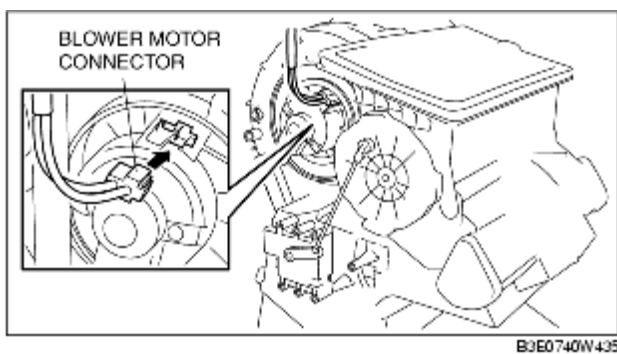



R.H.D.

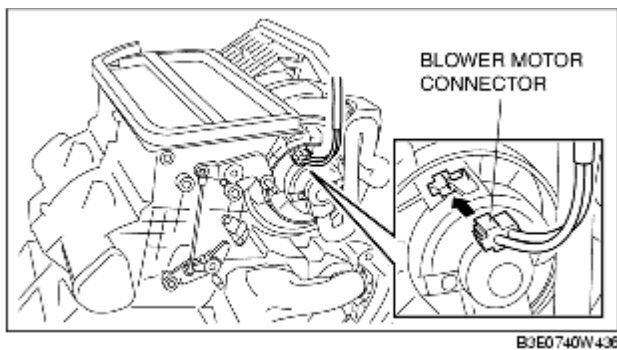

5. Install the blower motor cooling pipe.

L.H.D.

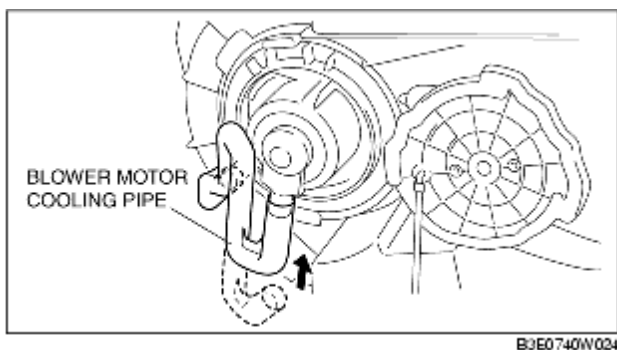

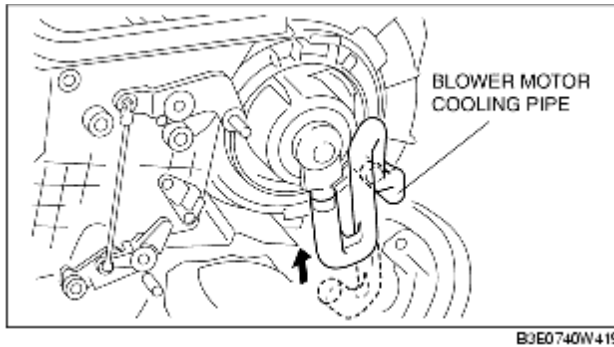R.H.D.

6. Remove the **SST (49 B061 015)** from the blower motor.
7. Install the airflow mode actuator. (See [AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION.](#)) (L.H.D.)
8. Install the air guide.
9. Connect the resistor connector. (Manual air conditioner) (L.H.D.)
10. Install the lower panel. (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
11. Install the front side trim. (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
12. Install the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
13. Install the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#).) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
14. Install the blower case after temporarily installing it with the air intake door at FRESH. (See [Blower Case Installation Note.](#)) (R.H.D.)

Caution

- Install the blower case while pressing the dashboard insulator, otherwise the blower case could be damaged.


15. Connect the air intake actuator connector.
16. Install the following parts:
 - (1) Auto leveling control module (See [AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.](#)) (L.H.D.)
 - (2) Car-navigation unit (See [CAR-NAVIGATION UNIT REMOVAL/INSTALLATION.](#))
 - (3) PJB and PJB bracket (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#))
 - (4) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION.](#))
 - (5) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
 - (6) Front side trim (RH) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (7) Front scuff plate (RH) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))

Blower Motor Installation Note

1. Position the blower motor projection upward and install the blower motor to the A/C unit.

Caution


- To prevent damage to the sirocco fan, install the blower motor being careful that the blower motor does not interfere with the A/C unit. Also, another person must hold the blower motor at the installation position.

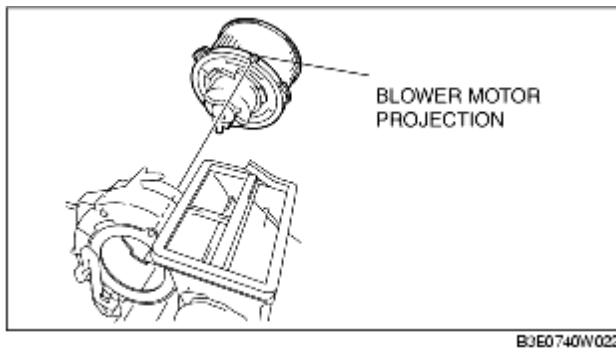


Blower Motor Cover Installation Note

1. To install, rotate the blower motor cover until a click is heard.

L.H.D.

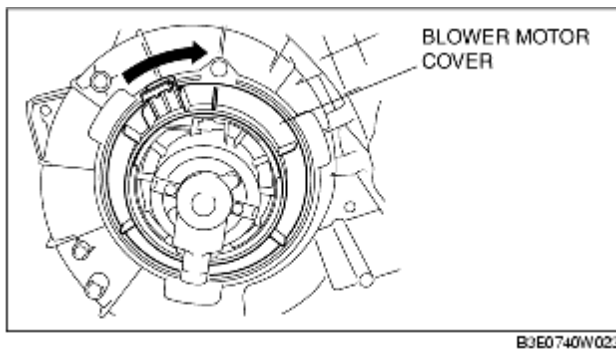

R.H.D.

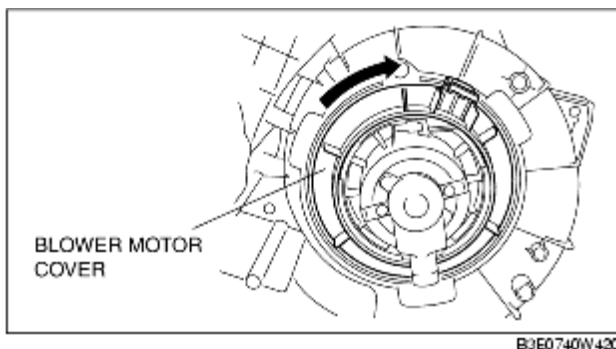

Blower Case Installation Note


1. If not replacing the blower case, replace the adhesive polyurethane on the fresh-air inlet of the blower case.

Caution

- To adhere new polyurethane properly, be sure to remove the adhesive agent and adhesive polyurethane completely.


Note

- If the blower case is removed or installed, the adhesive polyurethane can be damaged. Damaged adhesive polyurethane could cause abnormal noise or other malfunctions, therefore replace it.

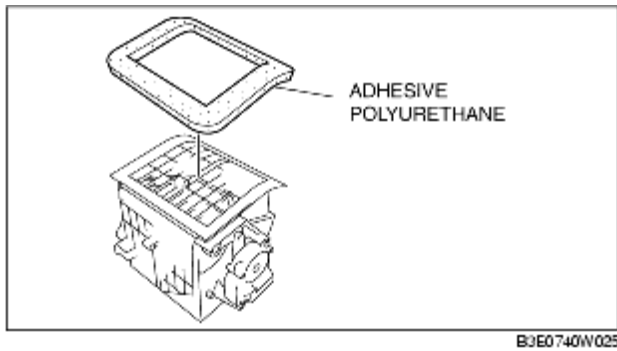


2. Insert the screw into the blower case and install the case to the A/C unit.


L.H.D.

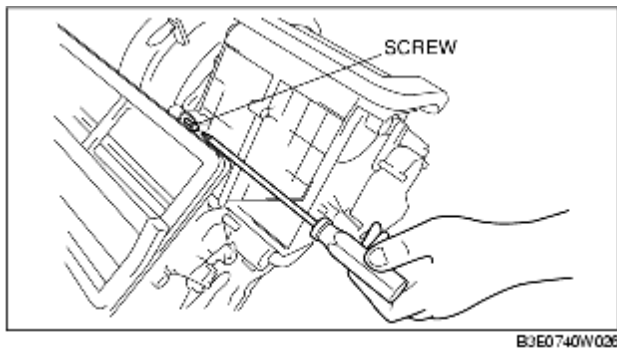

R.H.D.

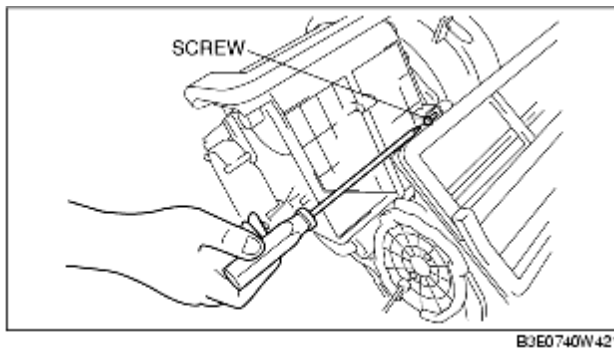


3. Insert the blower case in the direction shown in the figure. (R.H.D.)

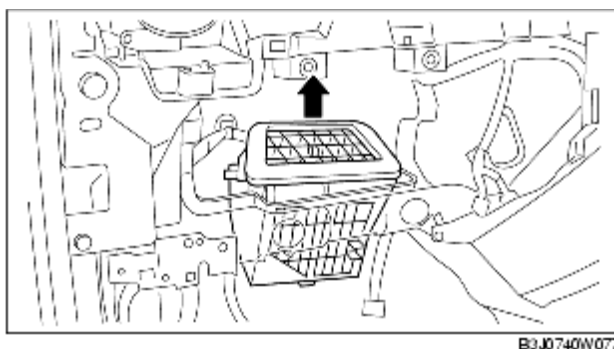


4. Install the blower case by inserting and rotating it in the directions of the arrows shown in the figure.
(R.H.D.)

L.H.D.

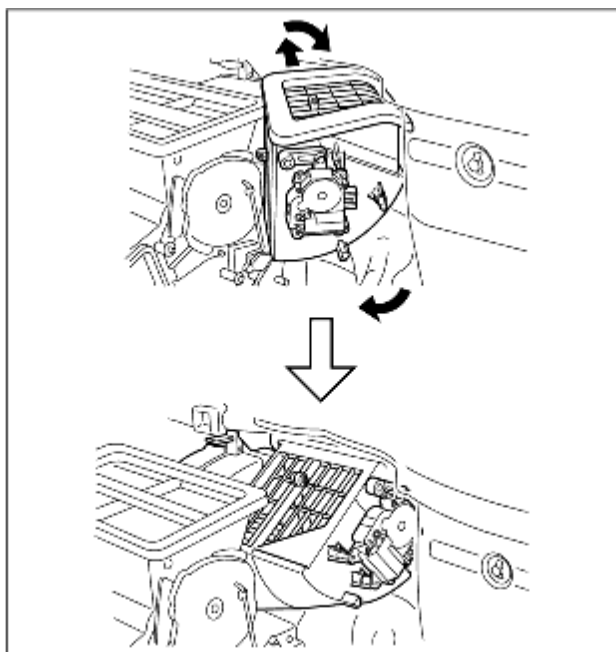

B3E0740W437

R.H.D.

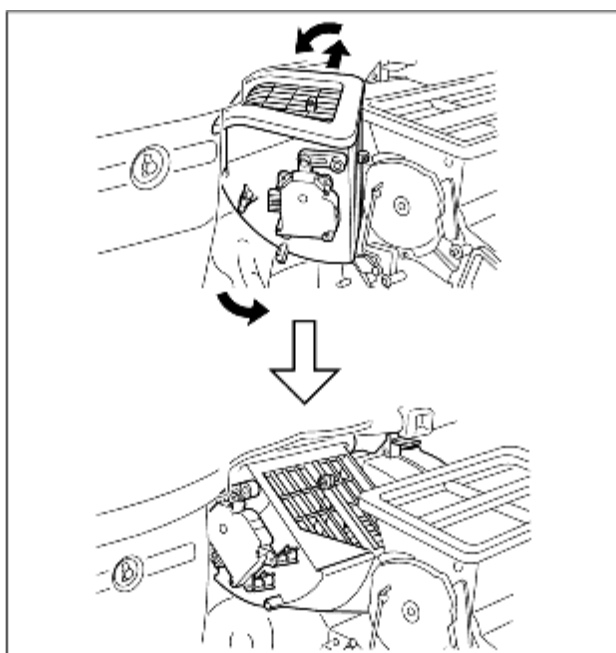

B3E0740W438