

BLOWER MOTOR INSPECTION

B3E074061020W03

Connect battery positive voltage to blower motor terminal A, connect terminal B to ground, and then verify its operation.

- If there is any malfunction, replace the blower motor.

