

EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION

B3E074061022W01

1. Remove the evaporator temperature sensor from the A/C unit. (See [A/C UNIT DISASSEMBLY/ASSEMBLY \[FULL-AUTO AIR CONDITIONER\]](#).) (See [A/C UNIT DISASSEMBLY/ASSEMBLY \[MANUAL AIR CONDITIONER\]](#).)