


## AIR INTAKE ACTUATOR INSPECTION

B3E074061060W02

1. Connect battery positive voltage to air intake actuator terminal C (or G), connect terminal G (or E) to ground, and then verify that the air intake actuator operates as shown in the table.

- If the operation condition is not normal, replace the air intake actuator.

### L.H.D.

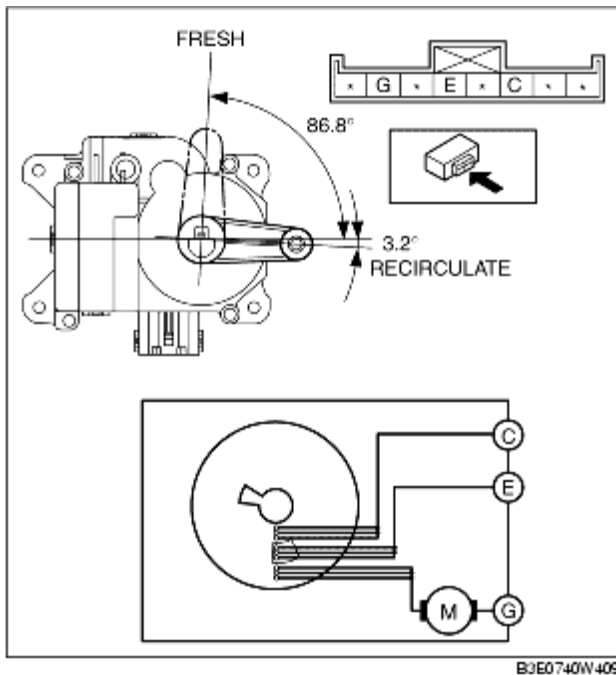

Terminal			Air intake actuator operation
C	E	G	
B+	-	Ground	FRESH→RECIRCULATE
-	Ground	B+	RECIRCULATE→FRESH