


# AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION

---

B3E074061070W01

1. Disconnect the negative battery cable.
2. Remove the airflow mode rod from the airflow mode actuator.
3. Remove in the order indicated in the table.

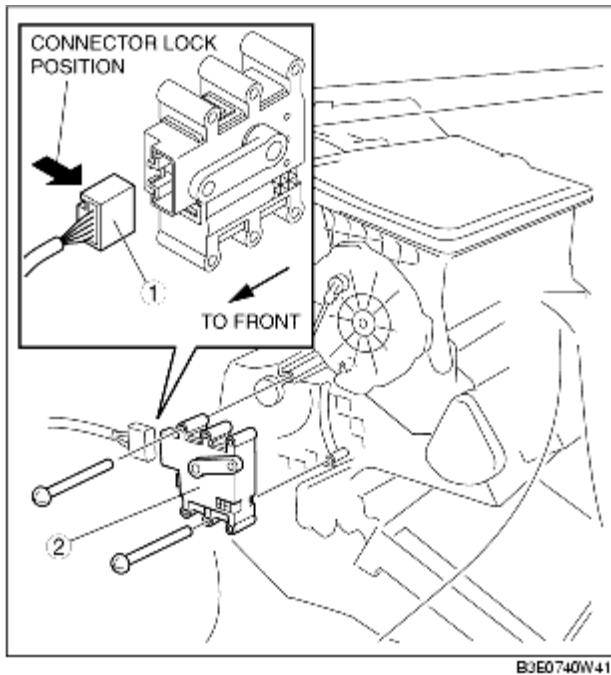

1	Airflow mode actuator connector
2	Airflow mode actuator

4. Install in the reverse order of removal.