


AIRFLOW MODE CONTROL SYSTEM DIAGRAM

B3E074061190T10

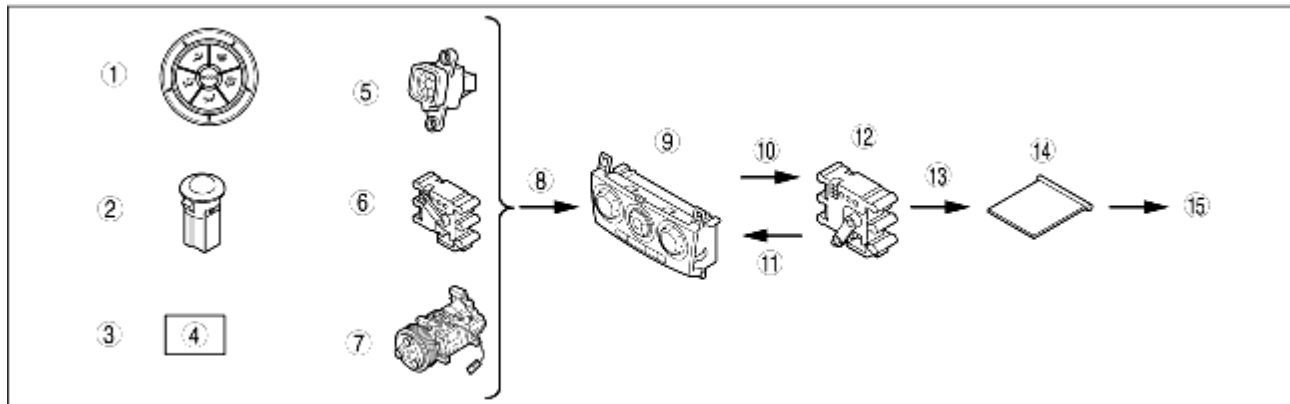

B3E0740T413

| | |
|----|---|
| 1 | Each mode switches |
| 2 | Solar radiation amount |
| 3 | Engine coolant temperature |
| 4 | ECT sensor |
| 5 | Cabin temperature |
| 6 | Air mix actuator temperature opening degree |
| 7 | A/C compressor control condition |
| 8 | Signal |
| 9 | Climate control unit |
| 10 | Output |
| 11 | Feedback |
| 12 | Airflow mode actuator |
| 13 | Operation |
| 14 | Airflow mode door |
| 15 | Airflow mode change |