


CLIMATE CONTROL UNIT REMOVAL [MANUAL AIR CONDITIONER]

B3E074061190W02

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Ashtray panel (See [CONSOLE REMOVAL/INSTALLATION.](#))
 - (2) Detach the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\].](#)) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\].](#))
 - (3) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (4) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (5) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
 - (6) Front scuff plate (RH) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (7) Front side trim (RH) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (8) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
 - (9) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION.](#))
 - (10) PJB and PJB bracket (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#))
3. Detach the PJB wiring harness clamp from the dashboard.
4. Remove the center panel module. (See [CENTER PANEL MODULE REMOVAL/INSTALLATION.](#))
5. Remove the air intake wire, air mix wire and airflow mode wire from the A/C unit.
6. Release the left and right tabs and remove in the order indicated in the table.

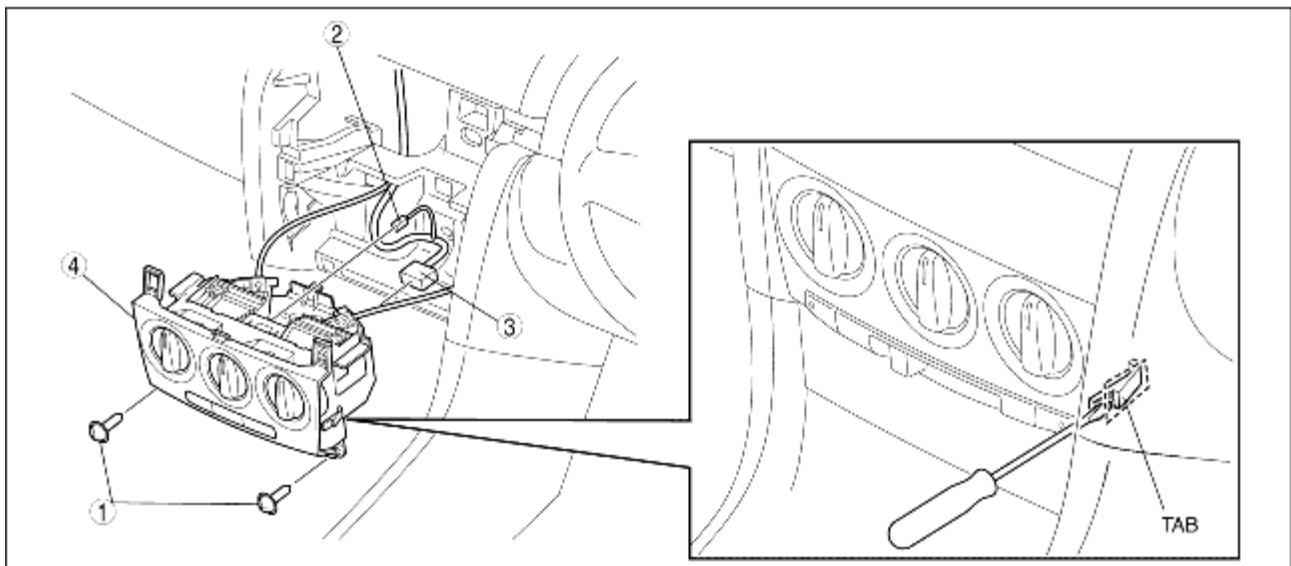

B3E07401W427

1	Screw
2	Fan switch connector
3	Climate control unit connector
4	Climate control unit