


CLIMATE CONTROL UNIT INSTALLATION [MANUAL AIR CONDITIONER]

B3E074061190W03

1. Pass each wire through the following routes and connect to A/C unit.

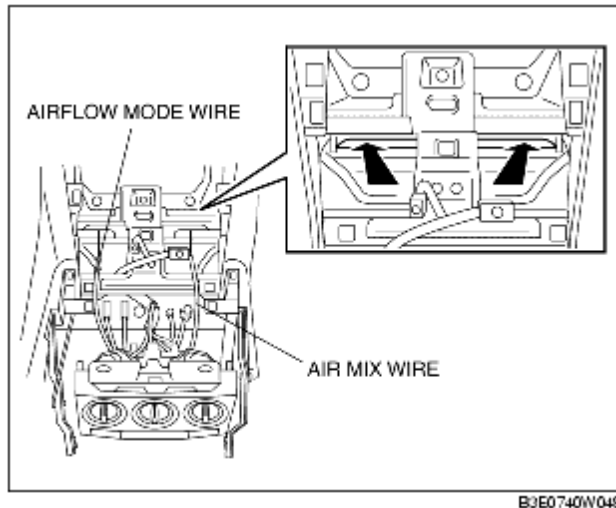

2. Connect the climate control unit connectors.
3. Adjust the climate control unit wires. (See [CLIMATE CONTROL UNIT WIRE ADJUSTMENT.](#))
4. Install the following parts:
 - (1) PJB and PJB bracket. (See [PASSENGER JUNCTION BOX \(PJB\) REMOVAL/INSTALLATION.](#))
 - (2) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION.](#))
 - (3) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
 - (4) Front side trim (RH) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (5) Front scuff plate (RH) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (6) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
 - (7) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (8) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (9) Detach the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\].](#)) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\].](#))
 - (10) Ashtray panel (See [CONSOLE REMOVAL/INSTALLATION.](#))
 - (11) Climate control unit
 - (12) Center panel module (See [CENTER PANEL MODULE REMOVAL/INSTALLATION.](#))
5. Connect the negative battery cable.