


CLIMATE CONTROL UNIT DISASSEMBLY/ASSEMBLY [MANUAL AIR CONDITIONER]

B3E074061190W05

1. Disassemble in the order indicated in the table.

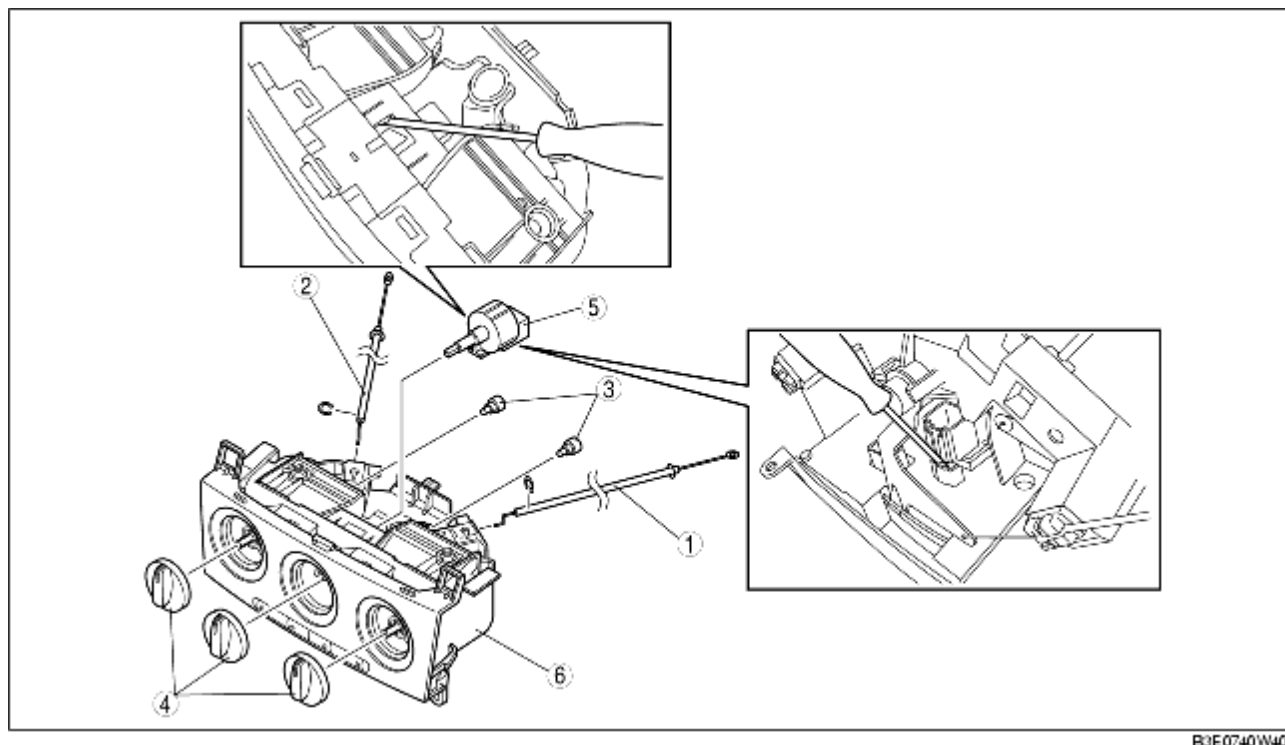

B3E0740W407

1	Air mix wire (See Wire Disassembly Note.) (See Wire Assembly Note.)
2	Airflow mode wire (See Wire Disassembly Note.) (See Wire Assembly Note.)
3	Illumination bulb
4	Knob
5	Fan switch
6	Body


2. Assemble in the reverse order of disassembly.

Wire Disassembly Note

1. Disassemble the wires as shown in the figure.

Wire Assembly Note

1. Assemble the wires at the positions shown in the figure.

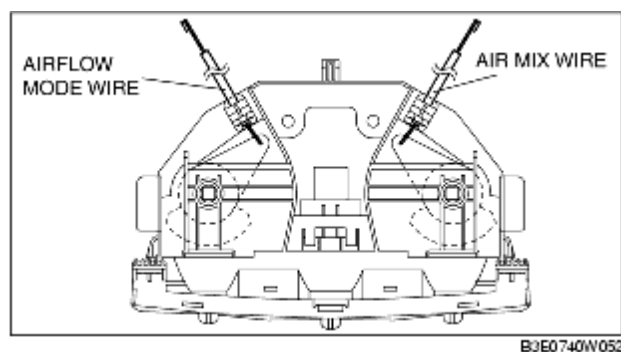

2. Assemble E-ring with the wire pressed against surface A.

- If the E-ring has been lost, the one at the wire end can be removed and reused.

