


AIR MIX ACTUATOR INSPECTION

B3E074061415W02

1. Connect battery positive voltage to air mix actuator terminal D (or F), connect terminal F (or D) to ground, and then verify that the air mix actuator operates as shown in the table.

- If the operation condition is not normal, replace the air mix actuator.

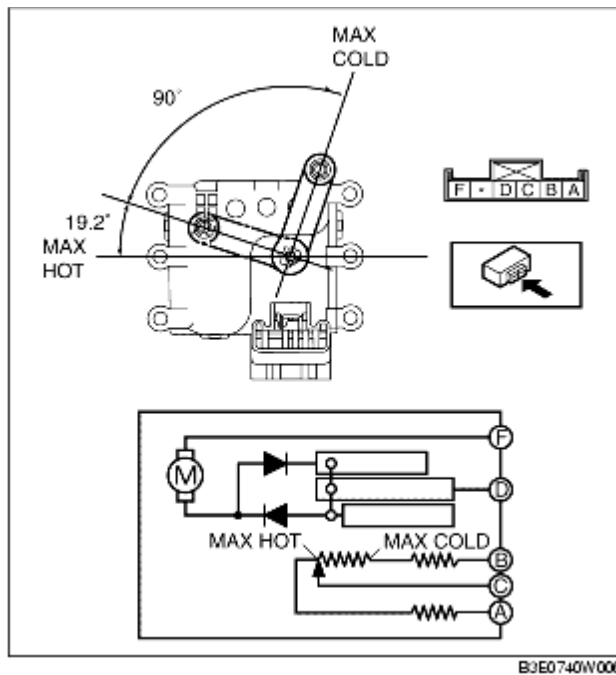

Terminal		Air mix actuator operation
D	F	
B+	Ground	HOT→COLD
Ground	B+	COLD→HOT

2. Verify that the resistance between terminals B and C, and C and A matches the air mix actuator operation as shown in the graph.

- If the operation condition and resistance are not normal, replace the air mix actuator.

