


REFRIGERANT PRESSURE SWITCH REMOVAL/INSTALLATION


B3E074061503W01

1. Disconnect the negative battery cable.
2. Discharge the refrigerant from the system. (See [REFRIGERANT RECOVERY.](#)) (See [REFRIGERANT CHARGING.](#))
3. Loosen the refrigerant pressure switch using two spanners.
4. Remove in the order indicated in the table.

L.H.D.

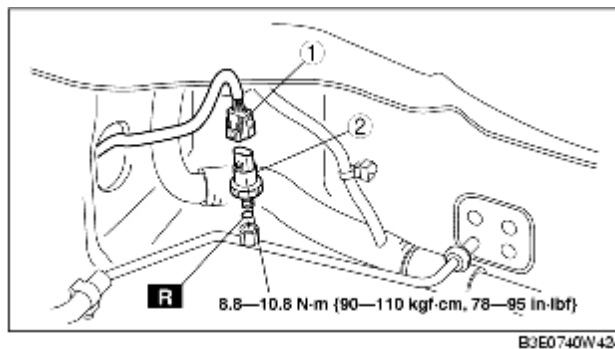

R.H.D.

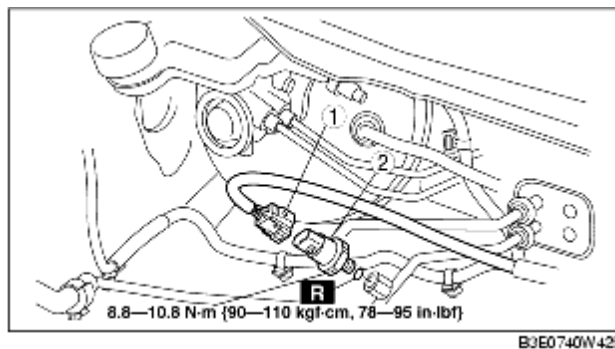

1	Refrigerant pressure switch connector
2	Refrigerant pressure switch (See Refrigerant Pressure Switch Installation Note.)

5. Install in the reverse order of removal.

Refrigerant Pressure Switch Installation Note

1. Apply compressor oil to O-ring and connect the joint.