

# REFRIGERANT PRESSURE SWITCH INSPECTION

B3E074061503W02

1. Install the **SST** (gas charging set).
2. Disconnect the refrigerant pressure switch connector.
3. Verify the high-pressure side reading of the **SST** (manifold gauge) and continuity between the refrigerant pressure switch terminals.

- If there is any malfunction, replace the refrigerant pressure switch.

