

# SOLAR RADIATION SENSOR REMOVAL/INSTALLATION


---

B3E074061751W01

1. Disconnect the negative battery cable.
2. Pry the solar radiation sensor from the dashboard using a flathead screwdriver wrapped with protective tape.
3. Remove in the order indicated in the table.

## Caution

- After the solar radiation sensor removal, the sensor connector could fall in the dashboard making the installation difficult. Therefore, hold the rooted end of the sensor connector using a clip or similar tool to prevent it from falling.

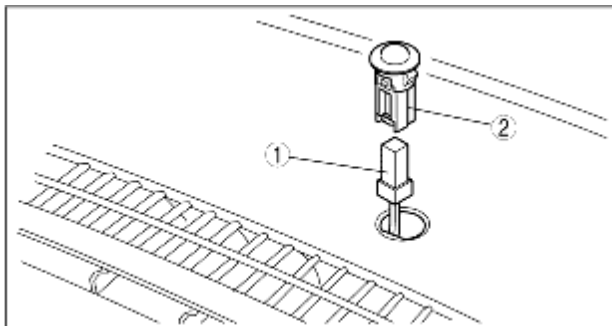

B3E0740W035

1	Solar radiation sensor connector
2	Solar radiation sensor

4. Install in the reverse order of removal.