


CABIN TEMPERATURE SENSOR REMOVAL/INSTALLATION

B3E074061758W01

1. Disconnect the negative battery cable.
2. Remove the lower panel. (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
3. Remove in the order indicated in the table.

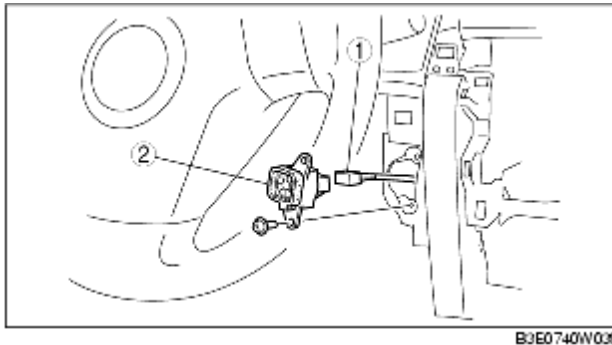

1	Cabin temperature sensor connector
2	Cabin temperature sensor

4. Install in the reverse order of removal.