


# CABIN TEMPERATURE SENSOR INSPECTION

B3E074061758W02

1. Measure the temperature around the cabin temperature sensor and measure the resistance between cabin temperature sensor terminals B and D.


- If the characteristics of the cabin temperature sensor are not as shown in the graph, replace the cabin temperature sensor.

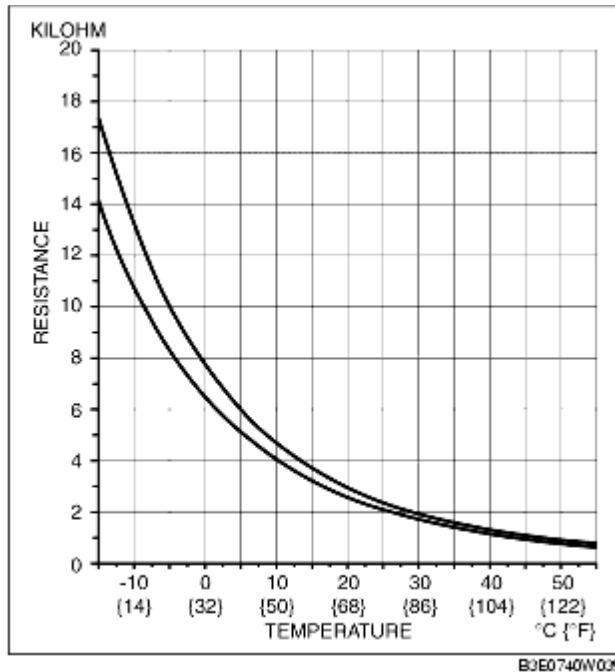

B3E0740W039

2. Connect battery positive voltage to cabin temperature sensor terminal A and connect terminal C to ground to verify fan operation.

- If there is any malfunction, replace the cabin temperature sensor.

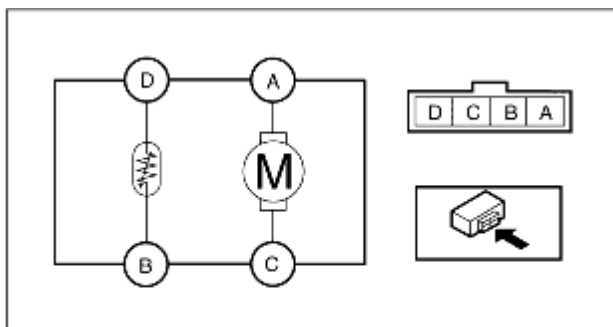

B3E0740W040