


AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION

B3E074061764W01

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

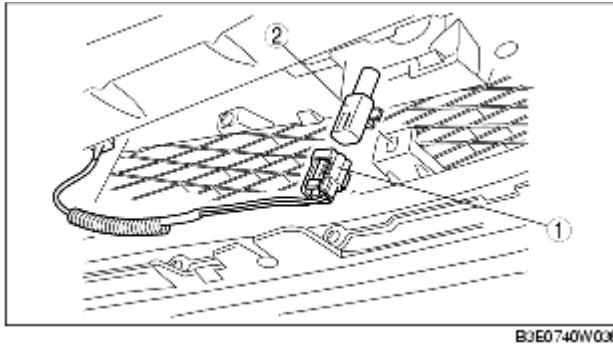

B3E0740W036

1	Ambient temperature sensor connector
2	Ambient temperature sensor

3. Install in the reverse order of removal.