

AMBIENT TEMPERATURE SENSOR INSPECTION

B3E074061764W02

1. Measure the temperature around the ambient temperature sensor and measure the resistance between the ambient temperature sensor terminal.

- If the characteristics of the ambient temperature sensor are not as shown in the graph, replace the ambient temperature sensor.

