
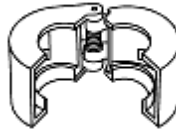 
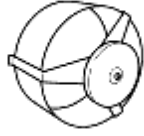 
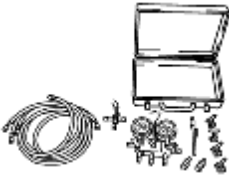 



## HEATER, VENTILATION & AIR CONDITIONING (HVAC) SST

B3E076001038W01

49 B061 014 Spring Lock Coupling Disconnect Tool		49 G061 001 Spring Lock Coupling Disconnect Tool		49 B061 015 Holder	
49 C061 0A0B Gas Charge Set		49 C061 013 Gas Leak Tester		WDS	