

# DTC TABLE

B3E080201046W05

DTC	System malfunction location	Page
WDS display		
B1046	Driver-side curtain air bag module and other air bag module circuits short	(See <a href="#">DTC B1046, B2773, B2774, B2775, B2776.</a> )
B1047	Driver-side side air bag module and other air bag module circuits short	(See <a href="#">DTC B1047, B1992, B1993, B1994, B1995.</a> )
B1048	Passenger-side air bag module (inflator No.1) and other air bag module circuits short	(See <a href="#">DTC B1048, B1925, B1933, B1935, B1938.</a> )
B1049	Passenger-side pre-tensioner front buckle and other air bag module circuits short	(See <a href="#">DTC B1049, B1881, B1882, B1883, B1886.</a> )
B104B	Driver-side side air bag sensor and other sensor circuits short to power supply	(See <a href="#">DTC B104B, B104E, B1051, U2017.</a> )
B104C	Passenger-side side air bag sensor and other sensor circuits short to power supply	(See <a href="#">DTC B104C, B104F, B1050, U2018.</a> )
B104D	Crash zone sensor and other sensor circuits short to power supply	(See <a href="#">DTC B104D, B2226, B2227, B2855.</a> )
B104E	Driver-side side air bag sensor circuit open or short	(See <a href="#">DTC B104B, B104E, B1051, U2017.</a> )
B104F	Passenger-side side air bag sensor (internal circuit abnormal)	(See <a href="#">DTC B104C, B104F, B1050, U2018.</a> )
B1050	Passenger-side side air bag sensor circuit open or short	
B1051	Driver-side side air bag sensor (internal circuit abnormal)	(See <a href="#">DTC B104B, B104E, B1051, U2017.</a> )
B1053	Driver-side front buckle switch and other sensor circuits short to power supply	(See <a href="#">DTC B1053, B2432, B2433, B2434, B2435.</a> )
B1054	Driver-side pre-tensioner front buckle and other air bag module circuits short	(See <a href="#">DTC B1054, B1877, B1878, B1879, B1885.</a> )
B1055	Passenger-side side air bag module and other air bag module circuits short	(See <a href="#">DTC B1055, B1996, B1997, B1998, B1999.</a> )
B1056	Passenger-side curtain air bag module and other air bag module circuits short	(See <a href="#">DTC B1056, B2777, B2778, B2779, B2780.</a> )
B1057	Driver-side air bag module (inflator No.1) and other air bag module circuits short	(See <a href="#">DTC B1057, B1916, B1932, B1934, B1936.</a> )
B1058	Driver-side air bag module (inflator No.2) and other air bag module circuits short	(See <a href="#">DTC B1058, B2228, B2230, B2232, B2234.</a> )
B1059	Passenger-side air bag module (inflator No.2) and other air bag module circuits short	(See <a href="#">DTC B1059, B2229, B2231, B2233, B2235.</a> )
B105A	SAS control module activation (deployment) control frequency error	(See <a href="#">DTC B105A.</a> )
B1231	SAS control module activation (deployment) control freeze	(See <a href="#">DTC B1231.</a> )
B1317	SAS control module power supply voltage increases (16.1 V or more)	(See <a href="#">DTC B1317, B1318.</a> )
B1318	SAS control module power supply voltage decreases (less than 9 V)	
B1342	SAS control module	(See <a href="#">DTC B1342.</a> )
B1877	Driver-side pre-tensioner front buckle circuit resistance high	

B1878	Driver-side pre-tensioner front buckle circuit short to power supply	(See <a href="#">DTC B1054, B1877, B1878, B1879, B1885.</a> )
B1879	Driver-side pre-tensioner front buckle circuit short to body ground	
B1881	Passenger-side pre-tensioner front buckle circuit resistance high	(See <a href="#">DTC B1049, B1881, B1882, B1883, B1886.</a> )
B1882	Passenger-side pre-tensioner front buckle circuit short to power supply	
B1883	Passenger-side pre-tensioner front buckle circuit short to body ground	
B1884	Passenger air bag deactivation (PAD) indicator circuit open or short to body ground	(See <a href="#">DTC B1884, B1890.</a> )
B1885	Driver-side pre-tensioner front buckle circuit resistance low	(See <a href="#">DTC B1054, B1877, B1878, B1879, B1885.</a> )
B1886	Passenger-side pre-tensioner front buckle circuit resistance low	(See <a href="#">DTC B1049, B1881, B1882, B1883, B1886.</a> )
B1890	Passenger air bag deactivation (PAD) indicator circuit short to power supply	(See <a href="#">DTC B1884, B1890.</a> )
B1916	Driver-side air bag module (inflator No.1) circuit short to power supply	(See <a href="#">DTC B1057, B1916, B1932, B1934, B1936.</a> )
B1925	Passenger-side air bag module (inflator No.1) circuit short to power supply	(See <a href="#">DTC B1048, B1925, B1933, B1935, B1938.</a> )
B1932	Driver-side air bag module (inflator No.1) circuit resistance high	(See <a href="#">DTC B1057, B1916, B1932, B1934, B1936.</a> )
B1933	Passenger-side air bag module (inflator No.1) circuit resistance high	(See <a href="#">DTC B1048, B1925, B1933, B1935, B1938.</a> )
B1934	Driver-side air bag module (inflator No.1) circuit resistance low	(See <a href="#">DTC B1057, B1916, B1932, B1934, B1936.</a> )
B1935	Passenger-side air bag module (inflator No.1) circuit resistance low	(See <a href="#">DTC B1048, B1925, B1933, B1935, B1938.</a> )
B1936	Driver-side air bag module (inflator No.1) circuit short to body ground	(See <a href="#">DTC B1057, B1916, B1932, B1934, B1936.</a> )
B1938	Passenger-side air bag module (inflator No.1) circuit short to body ground	(See <a href="#">DTC B1048, B1925, B1933, B1935, B1938.</a> )
B1992	Driver-side side air bag module circuit short to power supply	(See <a href="#">DTC B1047, B1992, B1993, B1994, B1995.</a> )
B1993	Driver-side side air bag module circuit short to body ground	
B1994	Driver-side side air bag module circuit resistance high	
B1995	Driver-side side air bag module circuit resistance low	
B1996	Passenger-side side air bag module circuit short to power supply	(See <a href="#">DTC B1055, B1996, B1997, B1998, B1999.</a> )
B1997	Passenger-side side air bag module circuit short to body ground	
B1998	Passenger-side side air bag module circuit resistance high	
B1999	Passenger-side side air bag module circuit resistance low	
B2226	Crash zone sensor (internal circuit abnormal)	(See <a href="#">DTC B104D, B2226, B2227, B2855.</a> )
B2227	Crash zone sensor (communication error)	
B2228	Driver-side air bag module (inflator No.2) circuit short to body ground	(See <a href="#">DTC B1058, B2228, B2230, B2232, B2234.</a> )
B2229	Passenger-side air bag module (inflator No.2) circuit short to body ground	(See <a href="#">DTC B1059, B2229, B2231, B2233, B2235.</a> )
B2230	Driver-side air bag module (inflator No.2) circuit short to power supply	(See <a href="#">DTC B1058, B2228, B2230, B2232, B2234.</a> )

B2231	Passenger-side air bag module (inflator No.2) circuit short to power supply	(See <a href="#">DTC B1059, B2229, B2231, B2233, B2235.</a> )
B2232	Driver-side air bag module (inflator No.2) circuit resistance high	(See <a href="#">DTC B1058, B2228, B2230, B2232, B2234.</a> )
B2233	Passenger-side air bag module (inflator No.2) circuit resistance high	(See <a href="#">DTC B1059, B2229, B2231, B2233, B2235.</a> )
B2234	Driver-side air bag module (inflator No.2) circuit resistance low	(See <a href="#">DTC B1058, B2228, B2230, B2232, B2234.</a> )
B2235	Passenger-side air bag module (inflator No.2) circuit resistance low	(See <a href="#">DTC B1059, B2229, B2231, B2233, B2235.</a> )
B2432	Driver-side front buckle switch circuit open	(See <a href="#">DTC B1053, B2432, B2433, B2434, B2435.</a> )
B2433	Driver-side front buckle switch circuit open or short to power supply	
B2434	Driver-side front buckle switch circuit short to body ground	
B2435	Driver-side front buckle switch circuit resistance not within specification	
B2477	Configuration error	(See <a href="#">DTC B2477.</a> )
B2773	Driver-side curtain air bag module circuit resistance low	(See <a href="#">DTC B1046, B2773, B2774, B2775, B2776.</a> )
B2774	Driver-side curtain air bag module circuit resistance high	
B2775	Driver-side curtain air bag module circuit short to body ground	
B2776	Driver-side curtain air bag module circuit short to power supply	
B2777	Passenger-side curtain air bag module circuit resistance low	(See <a href="#">DTC B1056, B2777, B2778, B2779, B2780.</a> )
B2778	Passenger-side curtain air bag module circuit resistance high	
B2779	Passenger-side curtain air bag module circuit short to body ground	
B2780	Passenger-side curtain air bag module circuit short to power supply	
B2855	Crash zone sensor circuit short	(See <a href="#">DTC B104D, B2226, B2227, B2855.</a> )
B2856	Crash zone sensor ID mismatch	(See <a href="#">DTC B2856, B2886, B2887.</a> )
B2886	Passenger-side side air bag sensor ID mismatch	
B2887	Driver-side side air bag sensor ID mismatch	
U2017	Driver-side side air bag sensor (communication error)	(See <a href="#">DTC B104B, B104E, B1051, U2017.</a> )
U2018	Passenger-side side air bag sensor (communication error)	(See <a href="#">DTC B104C, B104F, B1050, U2018.</a> )