


CRASH ZONE SENSOR REMOVAL/INSTALLATION

B3E081000145W01

Warning

- Handling the crash zone sensor improperly can accidentally deploy the air bags and pre-tensioner seat belts, which may seriously injure you. Read the service warnings and cautions before handling the crash zone sensor. (See [SERVICE WARNINGS](#).) (See [SERVICE CAUTIONS](#).)

1. Turn the ignition switch to the LOCK position.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove in the order indicated in the table.

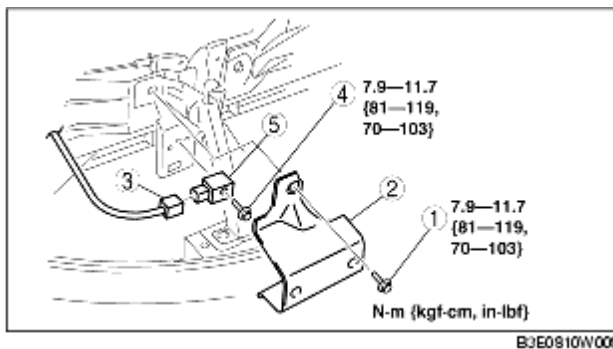

1	Bolt A
2	Cover
3	Connector
4	Bolt B
5	Crash zone sensor

4. Install in the reverse order of removal.
5. Turn the ignition switch to the ON position.
6. Verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.

- If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.