


CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION

B3E081000171W01

Warning

• Handling the air bag module improperly can accidentally deploy the air bag module, which may seriously injure you. Read the service warnings and cautions before handling the air bag module. (See [SERVICE WARNINGS](#).) (See [SERVICE CAUTIONS](#).)

1. Turn the ignition switch to the LOCK position.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove the following parts:
 - (1) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION](#).)
 - (2) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION](#).)
 - (3) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - (4) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - (5) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION](#).)
 - (6) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION](#).)
 - (7) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION](#).)
 - (8) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION](#).)
 - (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION](#).)
 - (10) Trunk side upper trim (5HB) (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION](#).)
 - (11) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION](#).)
 - (12) Map light (See [MAP LIGHT REMOVAL/INSTALLATION](#).)
 - (13) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION](#).)
 - (14) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION](#).)
 - (15) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION](#).)
 - (16) Headliner (See [HEADLINER REMOVAL/INSTALLATION](#).)
 - (17) Head Impact pad (See [HEAD IMPACT PAD REMOVAL/INSTALLATION](#).)
4. Remove in the order indicated in the table.

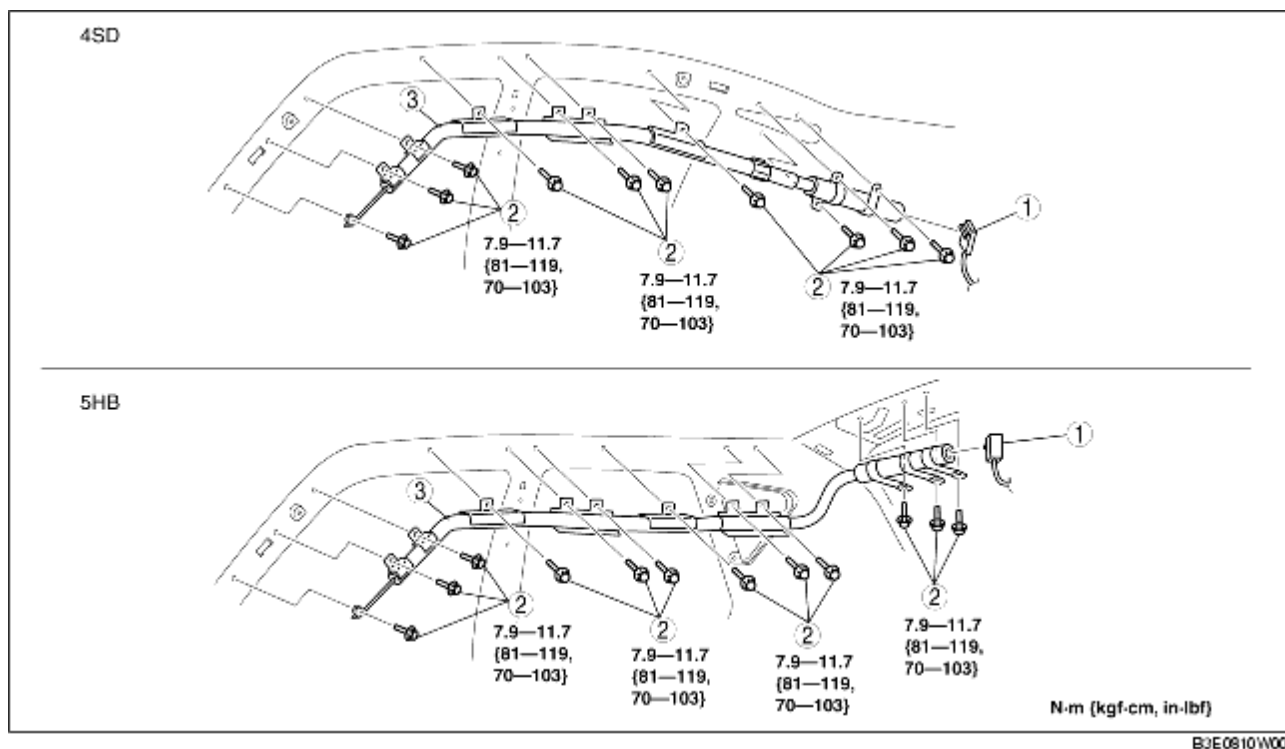

1	Connector
2	Bolt
3	Curtain air bag module

5. Install in the reverse order of removal.

6. When the ignition switch is turned to the ON position verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.

- If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.