


LOCATION INDEX

B3E081001046W01

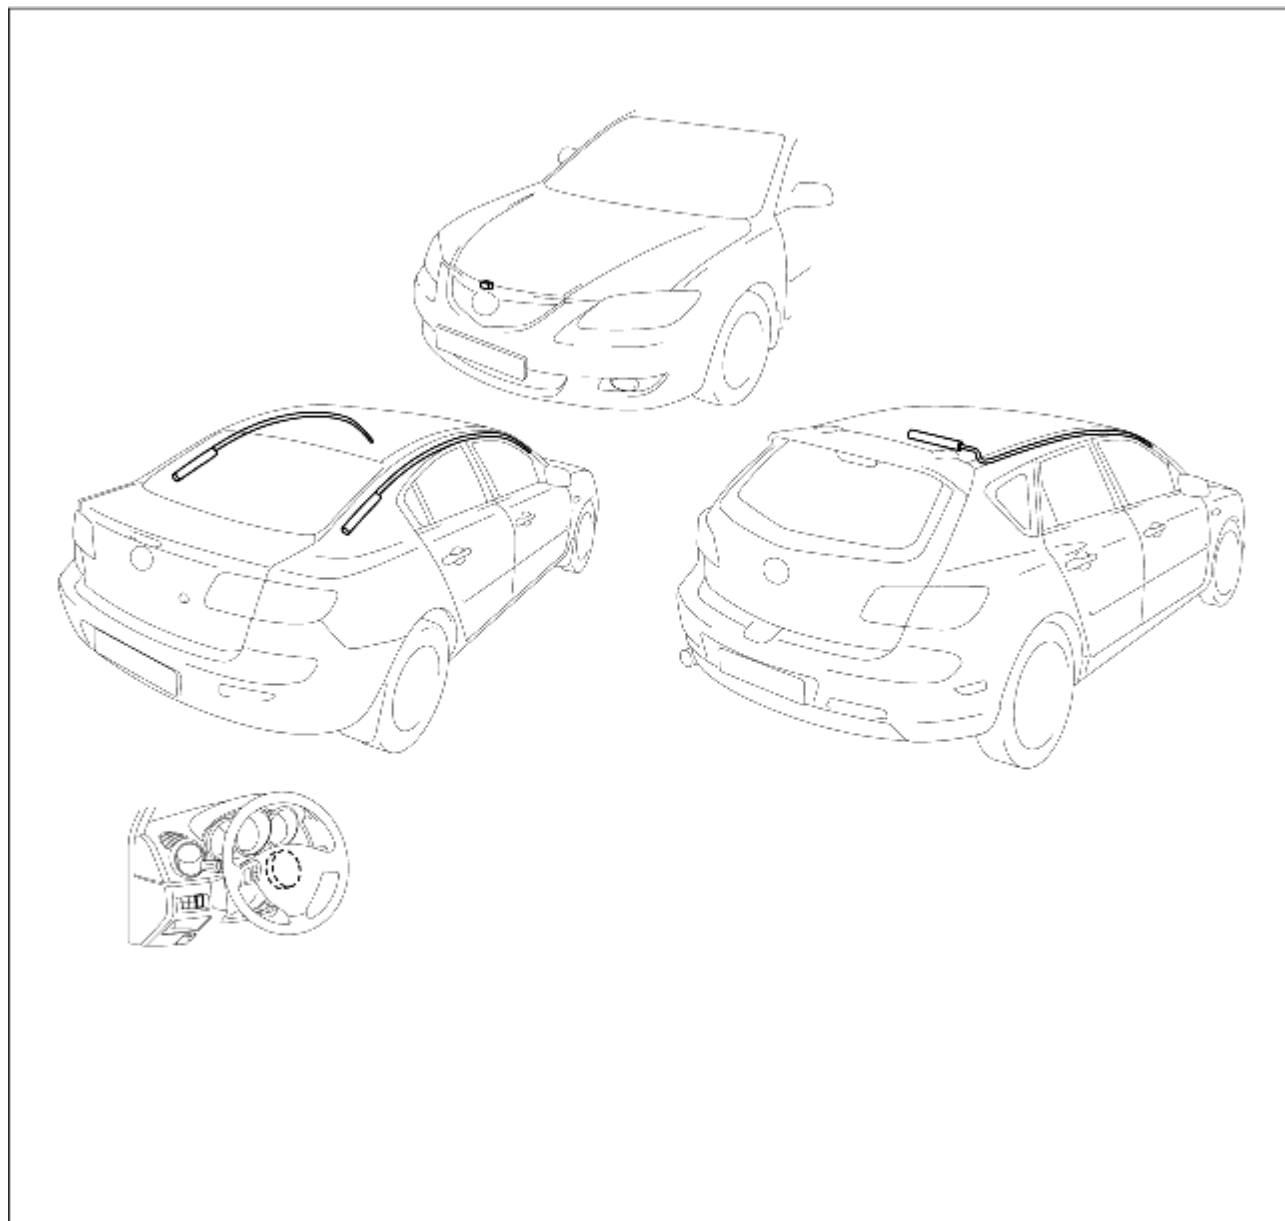

B3E0810W900

1	Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER FRONT BUCKLE DEPLOYMENT PROCEDURES.)
2	Passenger-side air bag module (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER FRONT BUCKLE DEPLOYMENT PROCEDURES.)
3	Side air bag module (See SIDE AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER FRONT BUCKLE DEPLOYMENT PROCEDURES.)
	Curtain air bag module

4	(See CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER FRONT BUCKLE DEPLOYMENT PROCEDURES.)
5	Pre-tensioner front buckle (See AIR BAG MODULE AND PRE-TENSIONER FRONT BUCKLE DEPLOYMENT PROCEDURES.)
6	SAS control module (See SAS CONTROL MODULE REMOVAL/INSTALLATION.)
7	Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/INSTALLATION.)
8	Side air bag sensor (See SIDE AIR BAG SENSOR REMOVAL/INSTALLATION.)
9	Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION.) (See CLOCK SPRING INSPECTION.) (See CLOCK SPRING ADJUSTMENT.)
10	Passenger air bag deactivation (PAD) switch (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION.) (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION.)
11	Passenger air bag deactivation (PAD) indicator