


INSPECTION OF SST (DEPLOYMENT TOOL)

B3E081001046W04

- Before using the **SST** (49 H066 002), inspect its operation.

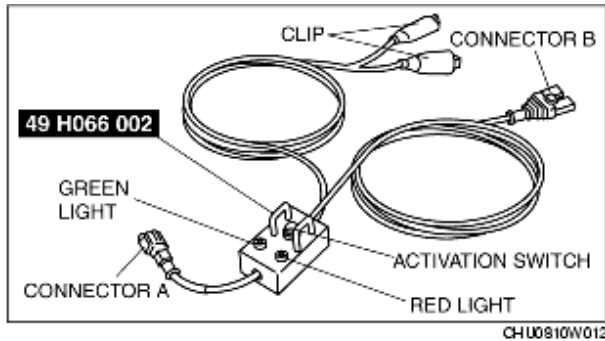

Inspection Procedure

- Follow the steps below to inspect the **SST** (49 H066 002).

- If not as indicated in the table, replace the **SST** (49 H066 002) because it has a malfunction.

Warning

- Do not use a malfunctioning SST (49 H066 002), otherwise it could cause the air bag module or pretensioner front buckle to accidentally operate (deploy).

Caution

- Because the permissible voltage for the SST (49 H066 002) is 12 V, do not connect a 24 V power source because it will damage the SST. Always connect only a 12 V power source.

Step	Inspection procedure	Light condition	
		Green	Red
1	Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.	On	Off
2	Connect connectors A and B.	Off	On
3	Press the activation switch.	On	Off

