


# DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION

B3E081057010W01

## Warning

• Handling the air bag module improperly can accidentally deploy the air bag module, which may seriously injure you. Read the service warnings and cautions before handling the air bag module. (See [SERVICE WARNINGS](#).) (See [SERVICE CAUTIONS](#).)

1. Turn the ignition switch to the LOCK position.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove in the order indicated in the table.

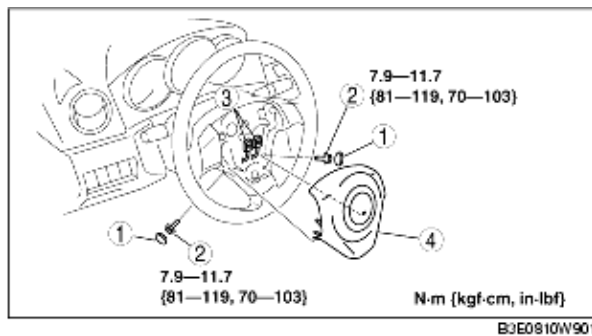

1	Cover
2	Bolt
3	Connector (See <a href="#">Connector Removal Note</a> .)
4	Driver-side air bag module

4. Install in the reverse order of removal.
5. Turn the ignition switch to the ON position.
6. Verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.

• If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.

## Connector Removal Note

1. Using a flathead screwdriver, pry out the connector stopper plate.

2. Disconnect the connector.